

Customer/technical services

For any technical or installation queries please contact Vado on 01934 745163.

Guarantee

This product is guaranteed against manufacturing defects from the date of purchase until the expiry of the relevant guarantee period shown below.

The guarantee is only valid if:-

1. The product has been installed, used and maintained in accordance with Vado's instructions and subjected to normal use only.
2. The defect is not due to use of an unsuitable or inadequate water or power supply.
3. The defect is not due to accident, misuse, neglect or repair other than by Vado or Vado authorised agents or damage caused by foreign objects or substances.
4. We have received from you the completed Guarantee Registration Form. Vado accepts no responsibility for any forms lost in the post and returns by registered means is therefore recommended.

Under this guarantee (which is non-transferable) Vado will, at its option, repair or replace free of charge any product (or replacement part) found to be defective. The guarantee does not extend to any consequential loss or damage. After repair or replacement the relevant guarantee period will be calculated from the original date of purchase.

The relevant guarantee periods are:-

1. Twelve years on chrome finish products.
2. Six years on Vado Identity products.
3. Three years on all other products with the exception of Stuart Turner Pumps which carry a 2 year Guarantee on Monsoon Range and 1 Year Guarantee on Showermate Range.

All claims under the guarantee must be submitted in writing to the person who supplied the product to you and must be received no later than the last day of the relevant guarantee period. All claims must be accompanied by proof of purchase (sales receipt or delivery note).

Vado operates a policy of continuous product development and therefore reserves the right to change the product, packaging and documentation specifications without notice.

This guarantee is in addition to and does not affect your statutory rights as a consumer.

Vado


Wedmore Road, Cheddar, Somerset, England BS27 3EB
tel 01934 744466. fax 01934 744345
technical@vado-uk.com
www.vado-uk.com

GUARANTEE REGISTRATION

NAME				
ADDRESS				
	POSTCODE			
RETAILER				
ADDRESS				
	POSTCODE			
PURCHASE DATE	ARTICLE NUMBER	(SEE BOX)		
PRODUCT DESCRIPTION				
WHO INSTALLED THE PRODUCT?	RETAILER	PLUMBER	BUILDER	SELF
FOR VADO USE				



Installation & maintenance instructions

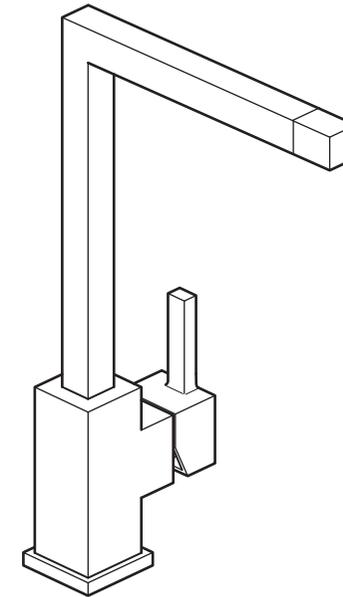

cucina

A range of kitchen mixers

Please leave these instructions with the customer

Important - please read

Please read these instructions carefully before starting installation and keep for future reference.

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and will invalidate the guarantee.

The installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing (UK:BS6700) Regulations.

We strongly recommend that you use a qualified and registered plumber.

General installation

Where connections are made to the mains cold water supply, WRC approved single check valves must be fitted to both hot and cold inlets. This is a stated requirement of Water Supply (Water Fittings) Regulations 1999 Schedule 2, Section 15.

Before making any inlet pipe connections, all supply pipes MUST be thoroughly flushed to remove debris. Failure to do so could result in damage or low flow from the mixer unit. Water Supply (Water Fittings) Regulations 1999 Schedule 2 Section 13.

The fitting of isolating valves to the inlet feeds is advised for ease of maintenance.

Please take great care when installing this valve not to damage its surface.

Please note if installing in an enclosed environment, access should be left for servicing and maintenance. No costs relating to inadequate access can be accepted.

Care of the mixer

Our products are finished to the highest standard and due care needs to be taken to ensure their looks are retained.


We recommend cleaning all products with a soft damp cloth ONLY and advise strongly against the use of ALL cleaning products i.e. powders and liquids.

If the above instructions are not followed this will invalidate your guarantee in the event of a problem occurring.


To remove any build up of limescale, just rub your fingers lightly over the nozzle.

Maintenance - CUC-1011-S

The aerator can be rubbed clean, however the supplied key can be used to unscrew and remove the aerator if large particles are stuck.

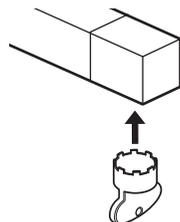

Operation

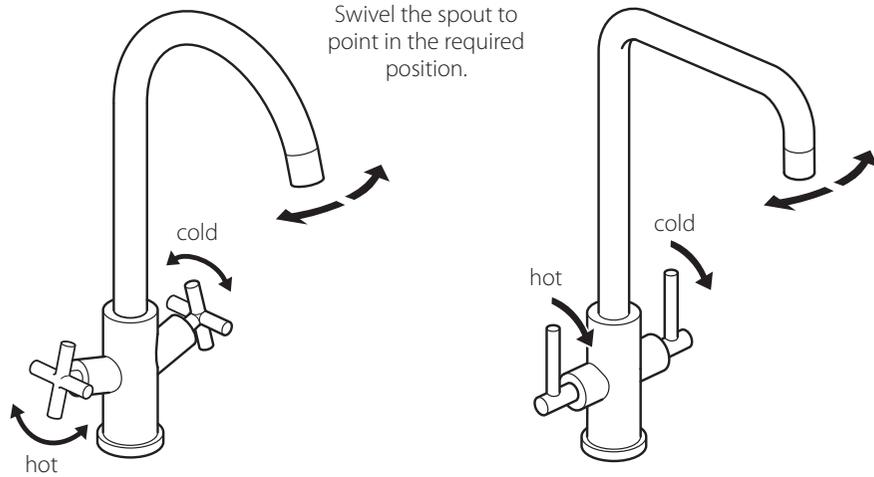


CUC-1063-S/S

Turn the hot handle clockwise to increase the flow of hot water.
Turn the cold handle anti clockwise to increase the flow of cold water.

CUC-1062-S/S


Moving the hot lever forwards will increase the flow of hot water.
Moving the cold lever forwards will increase the flow of cold water.

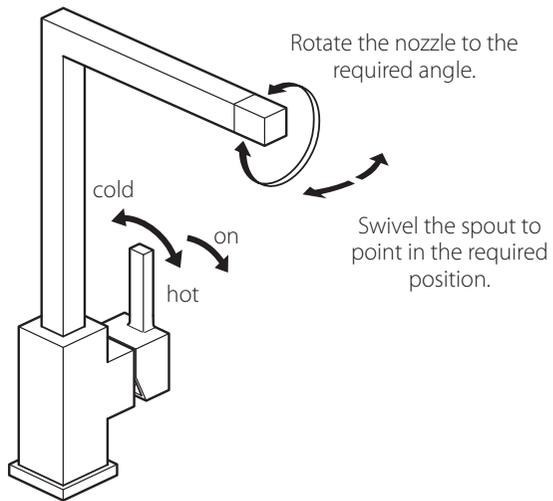


CUC-1011-S

Moving the mixer lever outwards will increase the flow of water.
Moving the mixer lever forward will increase the water temperature.


Installation - method 1 products

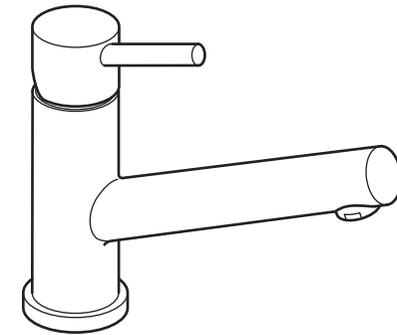

CUC-1009-S/S

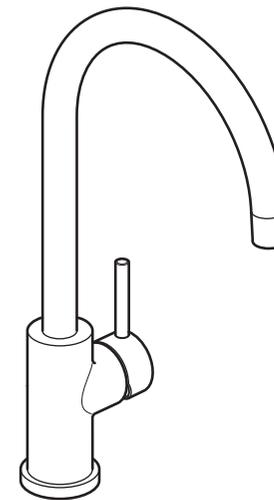


CUC-1008-S/S

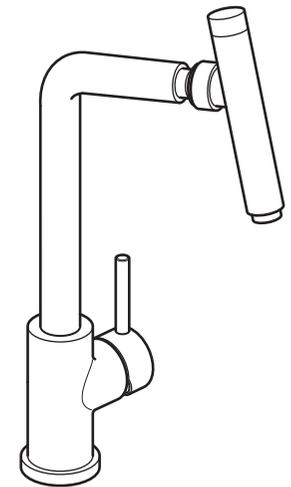

CUC-1010-S/S


CUC-1009-S/S - Dimensions

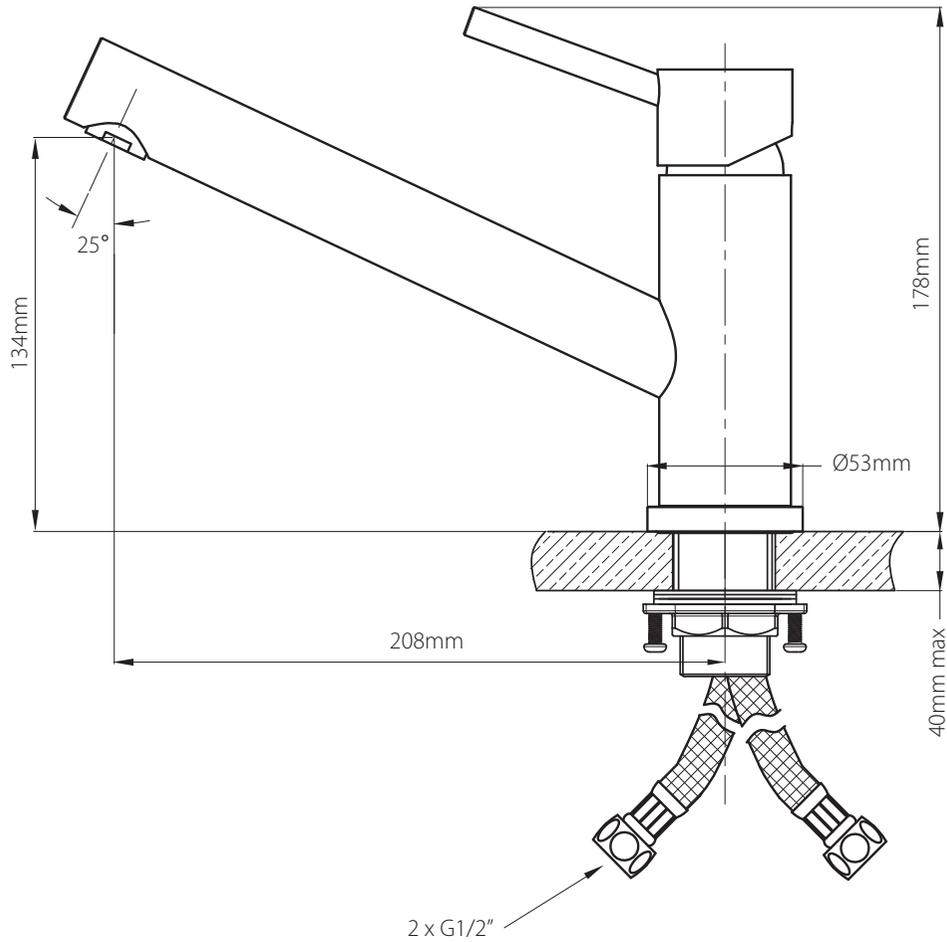

Operating Specifications


Minimum operating pressure 1bar
Maximum operating pressure 5 bar

Operation

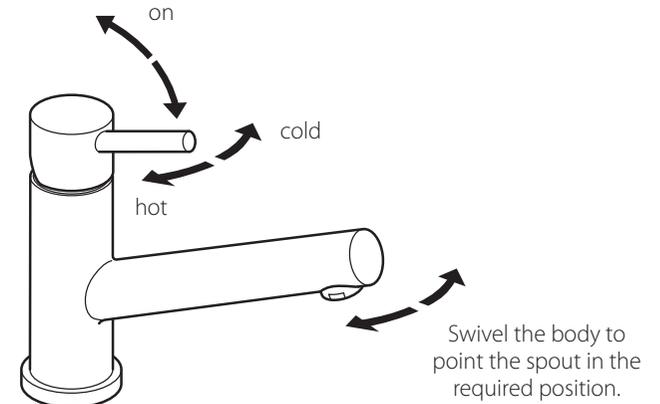

CUC-1009-S/S

Moving the mixer lever upwards will increase the flow of water.
Moving the mixer lever right to left will increase the water temperature.

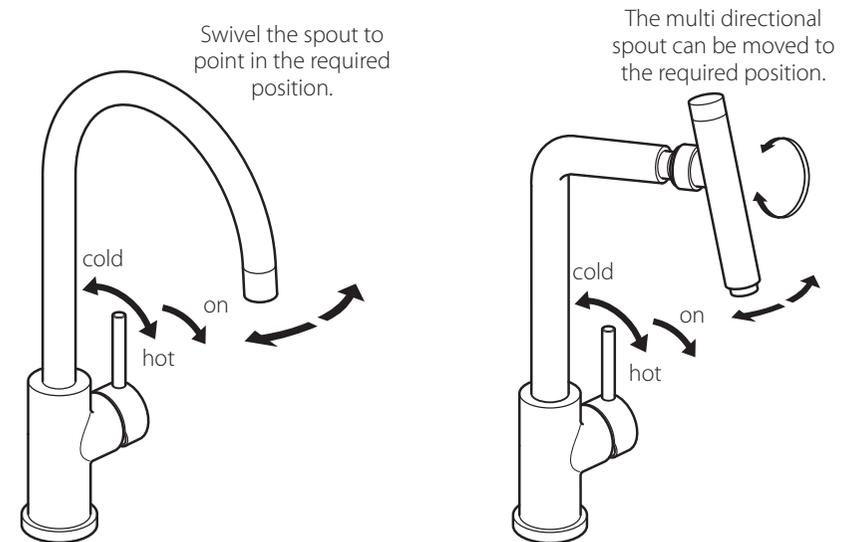

CUC-1008-S/S

Moving the mixer lever outwards will increase the flow of water.
Moving the mixer lever forward will increase the water temperature.

CUC-1010-S/S

Moving the mixer lever outwards will increase the flow of water.
Moving the mixer lever forward will increase the water temperature.

Installation - method 2

Before installing your new mixer, flush through the pipe work to ensure removal of debris, turn off the water supply.

Place the base seal into the bottom of the mixer.


Screw the two flexible pipes to the mixer body, tighten by hand only.

Screw both threaded rods into the back holes in the base of the mixer body and tighten the lock nuts.


Push the flexible hoses down through the hole in the sink and position the mixer. From the underside of the sink fit the rubber washer over the threaded rods followed by the metal washer and the nuts. Tighten the nuts to clamp the mixer to the sink.

CAUTION: Do not over tighten the nuts as this may damage the sink.

Connect the water supply to the inlet pipes. The hot water should be connected to the left hand pipe.

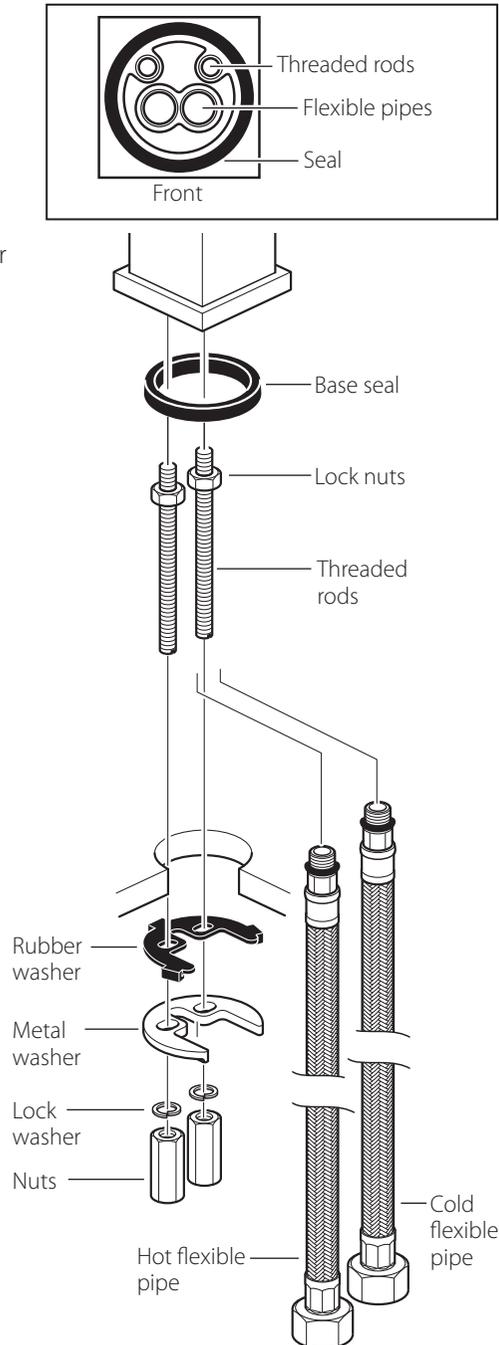

CUC-1008-S/S - Dimensions

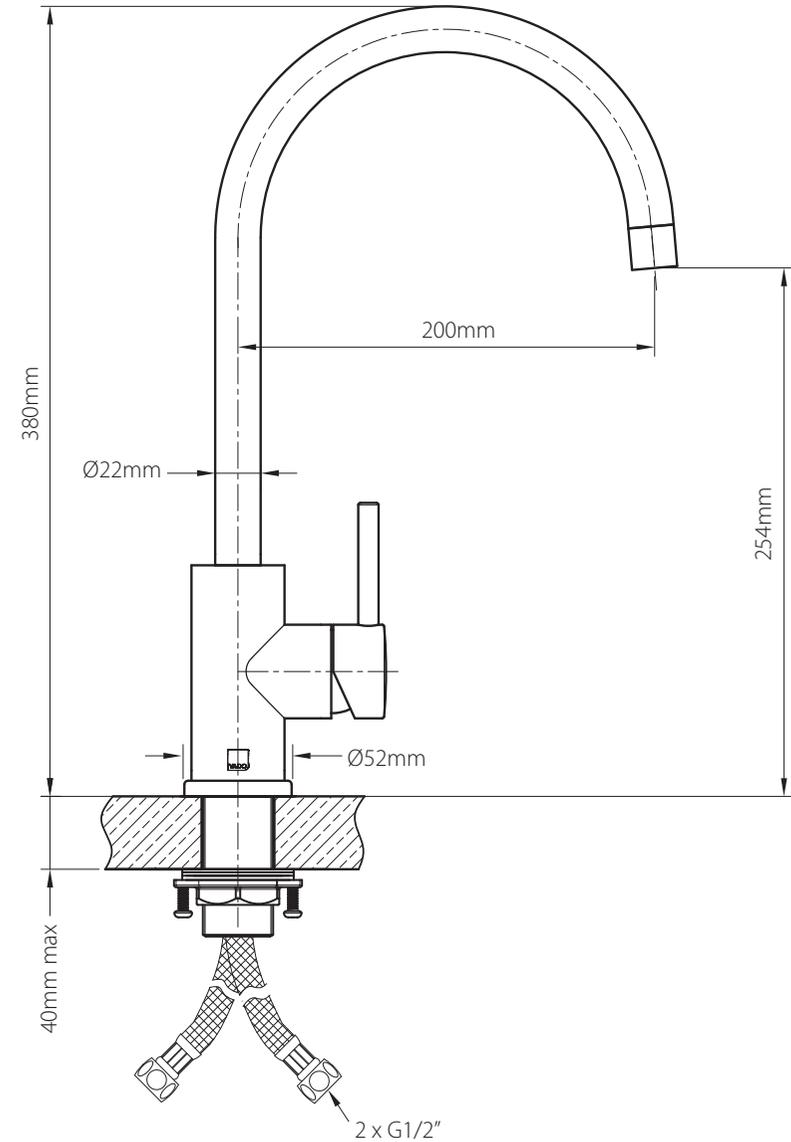


Operating Specifications

Minimum operating pressure 1 bar

Maximum operating pressure 5 bar


CUC-1010-S/S - Dimensions

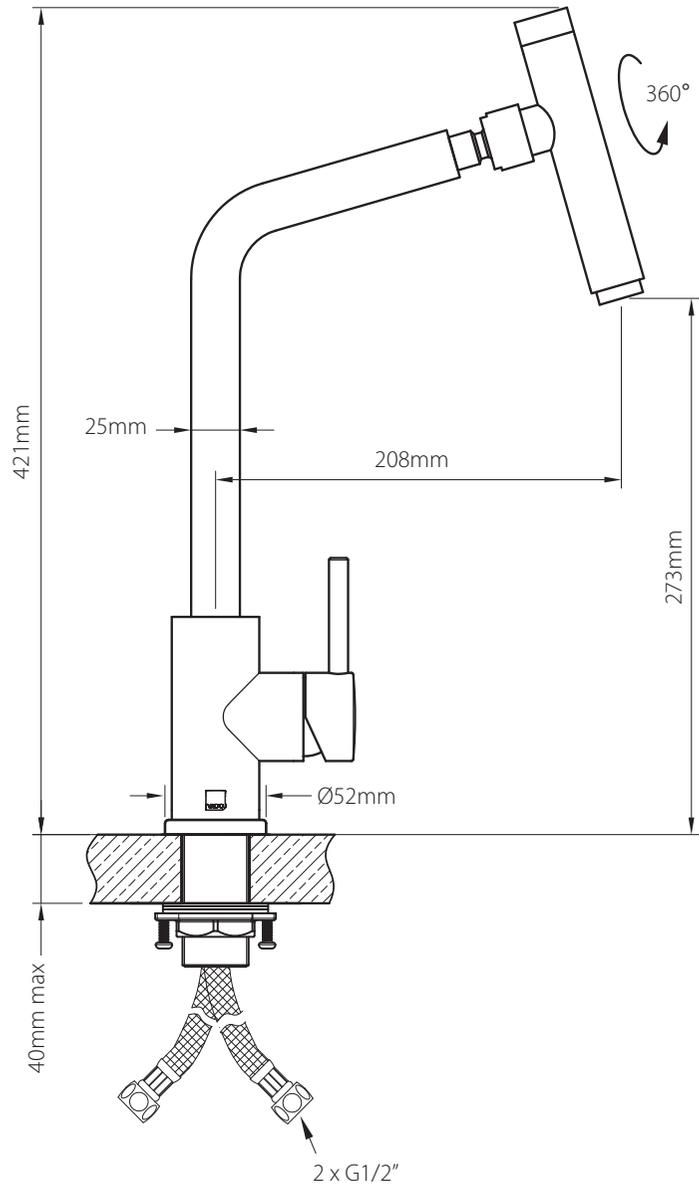

Operating Specifications

Minimum operating pressure 1 bar
 Maximum operating pressure 5 bar


CUC-1011-S/S - Dimensions

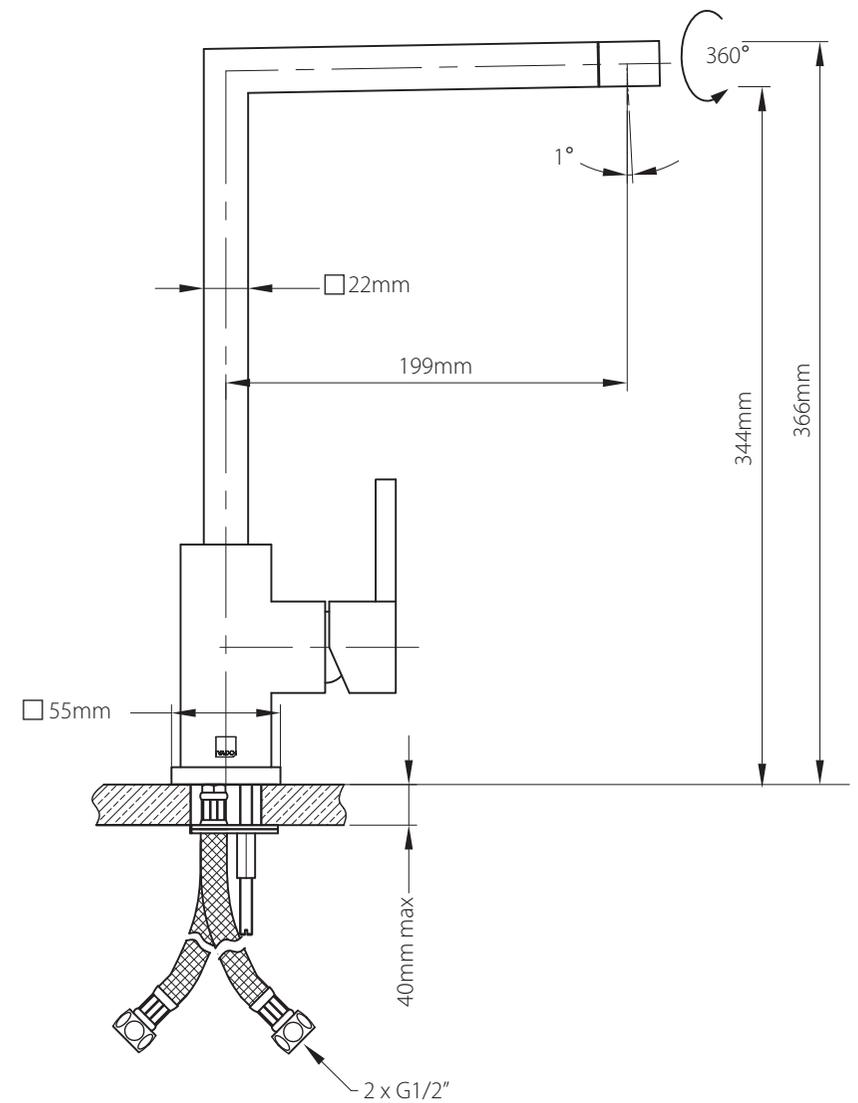

Operating Specifications

Minimum operating pressure 1 bar
 Maximum operating pressure 5 bar

CUC-1062-S/S - Dimensions

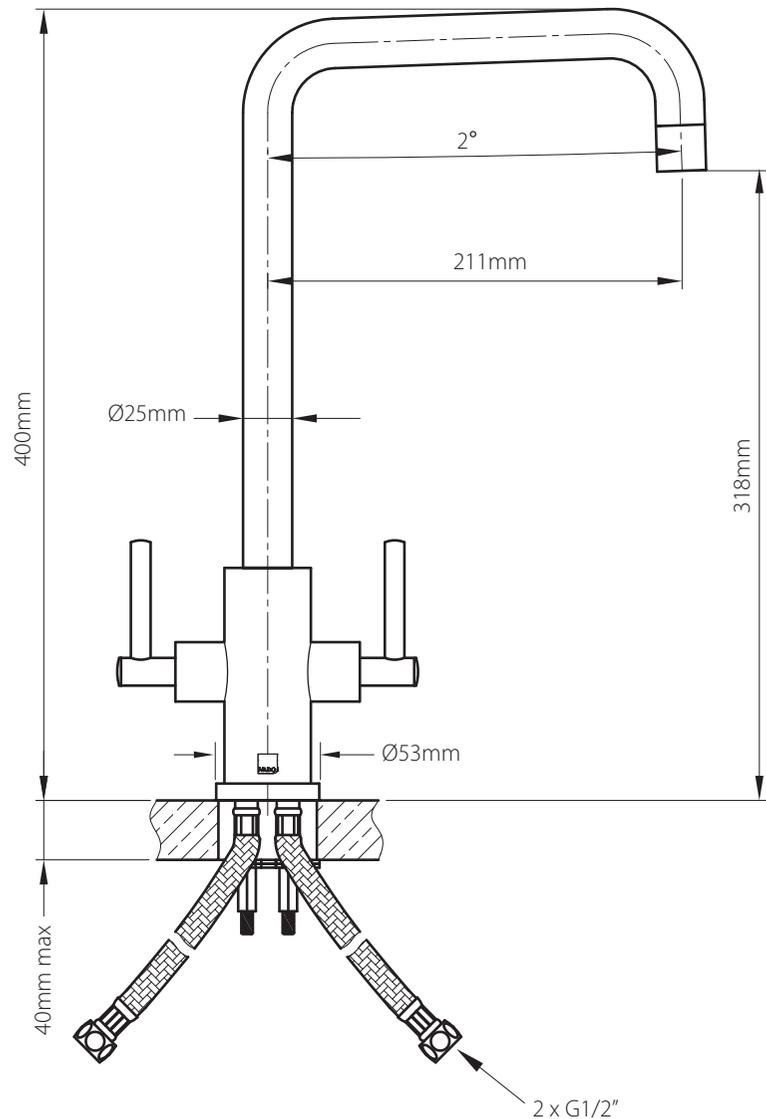

Operating Specifications

Minimum operating pressure 0.2 bar
Maximum operating pressure 5 bar

Installation - Method 1

Before installing your new mixer, flush through the pipework to ensure removal of debris, turn off the water supply.

Position the O-ring into the groove in the bottom of the mixer body.

Fit the threaded tube over the connections and screw into the body, the short threaded portion should be at the top, hand tighten only.



Position the mixer on the sink, make sure that the mixer is positioned correctly. Make sure that the spout will swing equally from one side to the other.

From the underside slide the rubber washer, metal washer over the threaded tube then screw on the nut until the screws touch the metal spacer. Tighten the screws to clamp the mixer to the sink.


CAUTION: Do not over tighten the screws as this may damage the sink.

Screw the two flexible pipes into the inlet connections, hand tighten.


Connect the water supply to the inlet pipes. The hot water should be connected to the left pipe.

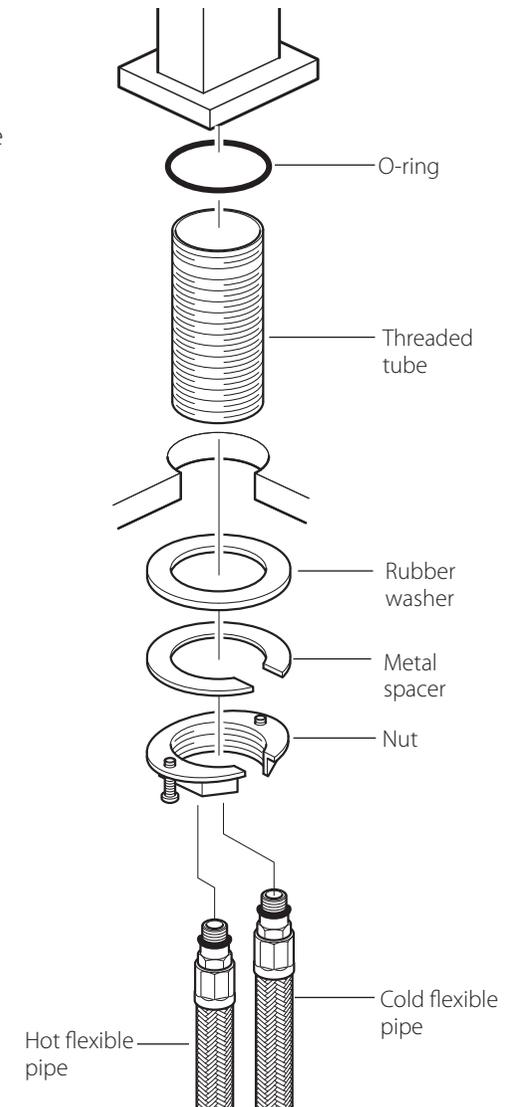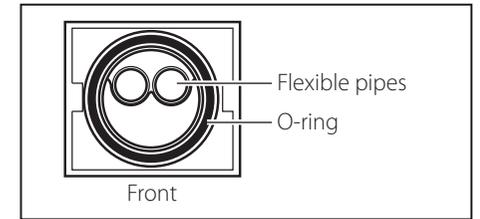


Installation - Method 2 products

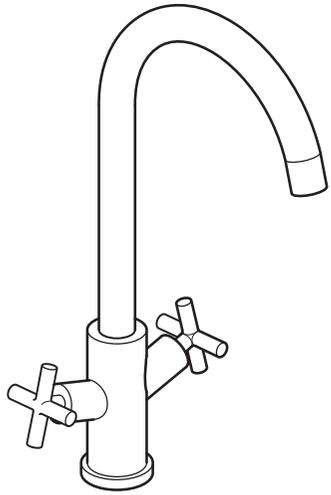

CUC-1063-S/S

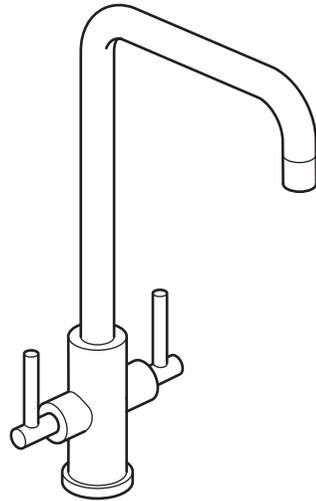


CUC-1062-S/S

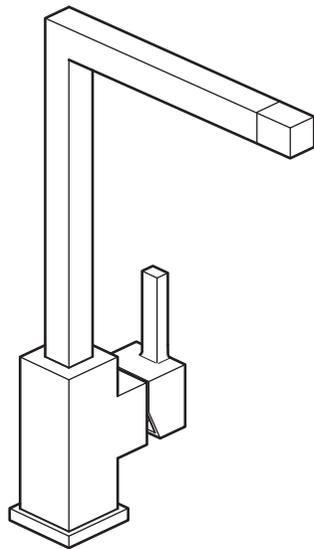

CUC-1011-S/S

CUC-1063-S/S - Dimensions

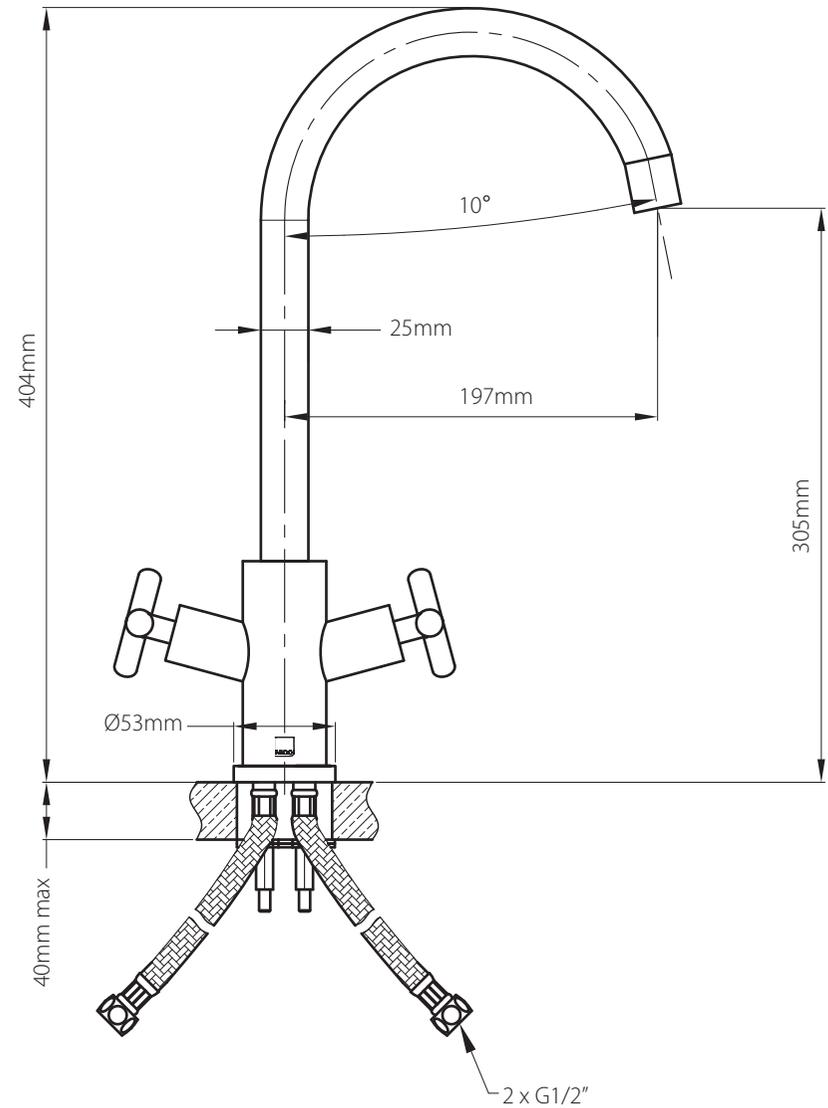

Operating Specifications

Minimum operating pressure 0.2 bar
Maximum operating pressure 5 bar