Customer/technical services

For any technical or installation queries please contact Vado on 01934 745163.

Guarantee

This product is guaranteed against manufacturing defects from the date of purchase until the expiry of the relevant guarantee period shown below.

The guarantee is only valid if:-

- 1. The product has been installed, used and maintained in accordance with Vado's instructions and subjected to normal use only.
- 2. The defect is not due to use of an unsuitable or inadequate water or power supply.
- 3. The defect is not due to accident, misuse, neglect or repair other than by Vado or Vado authorised agents or damage caused by foreign objects or substances.
- 4. We have received from you the completed Guarantee Registration Form. Vado accepts no responsibility for any forms lost in the post and returns by registered means is therefore recommended.

Under this guarantee (which is non-transferable) Vado will, at its option, repair or replace free of charge any product (or replacement part) found to be defective. The guarantee does not extend to any consequential loss or damage. After repair or replacement the relevant guarantee period will be calculated from the original date of purchase.

The relevant guarantee periods are:-

- 1. Twelve years on chrome finish products.
- 2. Six years on Vado Identity products.
- 3. Three years on all other products with the exception of Stuart Turner Pumps which carry a 2 year Guarantee on Monsoon Range and 1 Year Guarantee on Showermate Range.

All claims under the guarantee must be submitted in writing to the person who supplied the product to you and must be received no later than the last day of the relevant guarantee period. All claims must be accompanied by proof of purchase (sales receipt or delivery note).

Vado operates a policy of continuous product development and therefore reserves the right to change the product, packaging and documentation specifications without notice.

This guarantee is in addition to and does not affect your statutory rights as a consumer.


Vado

Wedmore Road, Cheddar, Somerset, England BS27 3EB tel 01934 744466. fax 01934 744345 technical@vado-uk.com www.yado-uk.com

| GUARANTEE REGISTRATION | | | | | |
|------------------------|----------------|----------|---------------|---------|-----------|
| NAME | | | | | |
| ADDRESS | | | | | |
| | | | POSTCODE | | |
| RETAILER | | | | | |
| ADDRESS | | | | | |
| | | | POSTCODE | | |
| PURCHASE DA | ΓΕ | | ARTICLE NUMBE | ER | (SEE BOX) |
| PRODUCT DESCRIPTION | | | | | |
| WHO INSTALLE | D THE PRODUCT? | RETAILER | PLUMBER | BUILDER | SELF |
| FOR VADO USE | | | | | |
| | | | | | |



Installation & maintenance instructions

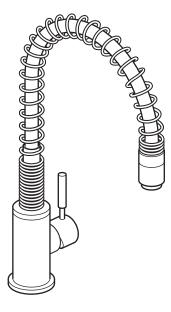



Sink mixer

Please leave these instructions with the customer

Important - please read

Please read these instructions carefully before starting installation and keep for future reference

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and will invalidate the guarantee.

The installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing (UK:BS6700) Regulations.

We strongly recommend that you use a qualified and registered plumber.

General installation

These fittings are mixing devices and therefore water supplies must be reasonably balanced.

This product must be installed in accordance with, and meet the requirements of the Water Supply (Water Fittings) Regulations 1999 and Scottish Byelaws 2004.

Before making any inlet pipe connections, all supply pipes MUST be thoroughly flushed to remove debris. Failure to do so could result in damage or low flow from the mixer unit. Water Supply (Water Fittings) Regulations 1999 Schedule 2 Section 13.

The fitting of isolating valves to the inlet feeds is advised for ease of maintenance.

Please take great care when installing this mixer not to damage its surface.

Please note if installing in an enclosed environment, access should be left for servicing and maintenance. No costs relating to inadequate access can be accepted.

Care of the mixer


Our products are finished to the highest standard and due care needs to be taken to ensure their looks are retained.

We recommend cleaning all products with a soft damp cloth ONLY and advise strongly against the use of ALL cleaning products i.e. powders and liquids.

If the above instructions are not followed this will invalidate your guarantee in the event of a problem occurring.

Installers/users notes

Dimensions

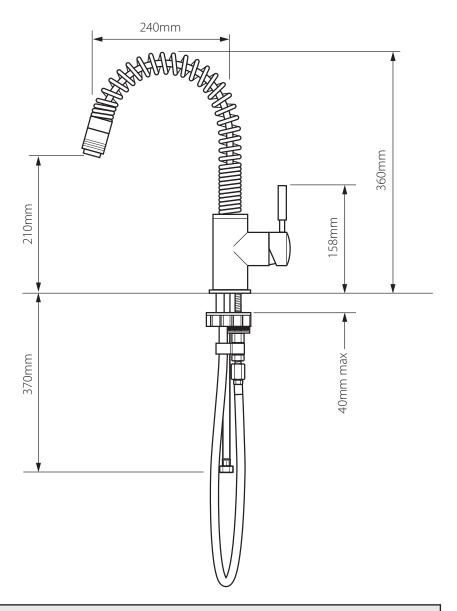

Operating Specifications

Maximum operating pressure 5 bar Minimum operating pressure 0.5 bar

Installation

Turn off the water supply.

Remove all the fittings.

Position the mixer onto the sink ensuring that the chrome base ring is correctly fitted between the mixer base and the sink top.

From the underside of the sink slide the rubber seal and nylon spacer over the hoses. Slide the rubber washer over the threaded stud followed by the washer and nut. Tighten the nut to clamp the mixer to the sink.

CAUTION: Do not over tighten the nut as this may damage the basin.

Slide on the hose retainer, followed by the small nut.


Screw the adaptor onto the flexible hose and then onto the end of the threaded stud.

Fix the hose weight in position at the bottom of the flexible hose.


NOTE: The hose weight is adjustable to ensure the smooth flow of the hose.

Before connecting to the water supply flush though the supply pipes in order to remove any debris.

Finally connect the red braided hose to the hot water supply and the blue braided hose to the cold supply.

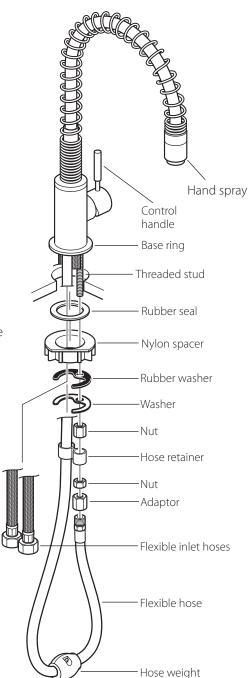

Operation

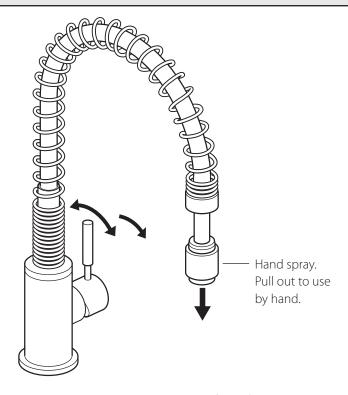

Move the mixer lever to the right to increase the flow of water.

Pull the mixer lever forward to increase the flow of cold water. Push the mixer lever backwards to increase the flow of hot water.