## customer/technical services

For any technical or installation queries please contact Vado on 01934 745163.

## guarantee

This product is guaranteed against manufacturing defects from the date of purchase until the expiry of the relevant guarantee period shown below.

#### The guarantee is only valid if:-

1. The product has been installed, used and maintained in accordance with Vado's instructions and subjected to normal use only.

2. The defect is not due to use of an unsuitable or inadequate water or power supply.

3. The defect is not due to accident, misuse, neglect or repair other than by Vado or Vado authorised agents or damage caused by foreign objects or substances.

4. We have received from you the completed Guarantee Registration Form. Vado accepts no responsibility for any forms lost in the post and returns by registered means is therefore recommended.

Under this guarantee (which is non-transferable) Vado will, at its option, repair or replace free of charge any product (or replacement part) found to be defective. The guarantee does not extend to any consequential loss or damage. After repair or replacement the relevant guarantee period will be calculated from the original date of purchase.

#### The relevant guarantee periods are:-

1. Twelve years on chrome finish products.

2. Three years on all other products with the exception of Stuart Turner Pumps which carry a 2 year Guarantee on Monsoon Range and 1 Year Guarantee on Showermate Range.

All claims under the guarantee must be submitted in writing to the person who supplied the product to you and must be received no later than the last day of the relevant guarantee period. All claims must be accompanied by proof of purchase (sales receipt or delivery note).

Vado operates a policy of continuous product development and therefore reserves the right to change the product, packaging and documentation specifications without notice.


This guarantee is in addition to and does not affect your statutory rights as a consumer.

Vado Wedmore Road, Cheddar, Somerset, England BS27 3EB tel 01934 744466. fax 01934 744345 technical@vado-uk.com www.vado-uk.com

(	GUARANTEE RE	GISTRATION		
NAME				
ADDRESS				
		POSTCODE		
RETAILER				
ADDRESS				
		POSTCODE		
PURCHASE DATE		ARTICLE NUMBER		(SEE BOX)
PRODUCT DESCRIPTION				
WHO INSTALLED THE PRODUCT?	RETAILER	PLUMBER	BUILDER	SELF
FOR VADO USE				



# installation & maintenance instructions

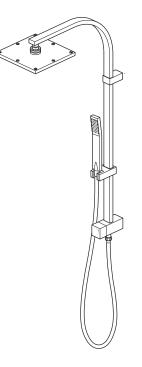

# watergames

exposed riser rail kit with diverter

please leave these instructions with the customer

## important - please read

Please read these instructions carefully before starting installation and keep for future reference.

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and will invalidate the guarantee.

The installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing (UK:BS6700) Regulations.

We strongly recommend that you use a qualified and registered plumber.

Installer must comply with current regulations.

Please note if installing in an enclosed environment, access should be left for servicing and maintenance. No costs relating to inadequate access can be accepted.

## care of the mixer

Our products are finished to the highest standard and due care needs to be taken to ensure their looks are retained.


We recommend cleaning all products with a soft damp cloth ONLY and advise strongly against the use of ALL cleaning products i.e. powders and liquids.

If the above instructions are not followed this will invalidate your guarantee in the event of a problem occurring.

#### maintenance

To remove any build up of limestone on the shower head, just rub your fingers lightly over the nozzles.

## installation

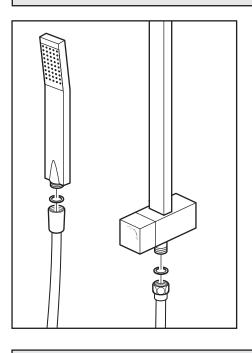


#### Handset

Place one of the rubber washers into the cone end of the hose and screw to the handset slot the cone into the shower head holder on the riser.

Place the second rubber washer into the other end of the hose and attach it to the diverter.


## operation

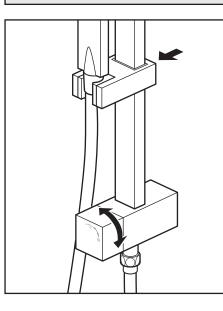

Place the cone part of the hose into the handset holder, the holder can be repositioned by pressing the button at the back and sliding up and down.

Rotate the control handle 90° clockwise to divert the water from the handset to the riser. Rotate the control handle 90° anti clockwise to divert the water from the riser to the handset.

## dimensions

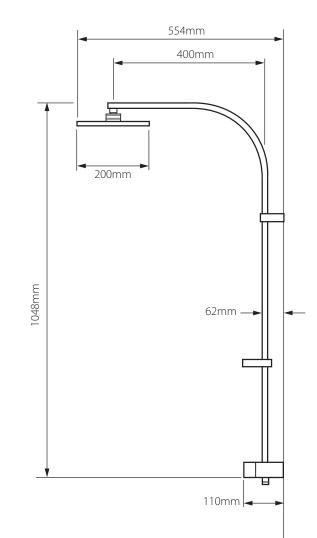

## installation

Warning! Please check for any hidden cables and pipes before drilling holes in the wall.

Before installing your new riser rail, flush through the pipe work to ensure removal of debris, turn off the water supply.

Mark the position of the diverter on the wall at the required height. Mark a vertical line up the wall from the centre of the diverter.


Prepare the wall with a flush ½" connector, and connect to the water supply coming from the mixer. Using the supplied PTFE tape screw the adaptor into the wall.

#### Riser rail


Assemble by sliding the support bracket onto the top riser, make sure that the top riser is pointing away from the wall and the grub screw is on the underside of the bracket.

Screw the riser into the bottom of the top riser.

Reposition the bracket over the joint and tighten the 2 screws within the bracket to secure the bracket to the riser.

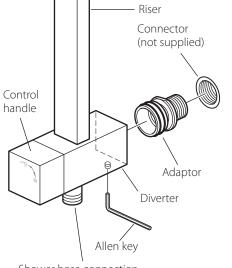

Shower hose connection

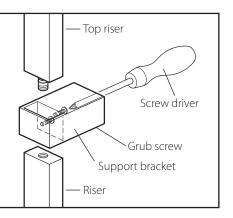

## installation

Temporarily hold the riser assembly onto the adaptor, with a pencil mark around the support bracket.

Remove the riser rail assemble.

Place the mounting bracket centrally within the marked position and mark the screw hole.

Using a 6mm drill bit for the wall plug, drill the wall at the centre of the marked position and fix the mounting bracket in position using the supplied wall plug and screw.

Push the riser rail assembly onto the adaptor being careful not to damage the seals.

Push the support bracket onto the mounting bracket and secure from underneath with the hexagonal grub screw using the supplied Allen key.

Secure the diverter to the adapter by tightening the grub screw on the underside using the supplied Allen key.

Finally, make sure there is a rubber washer in place in the shower head and screw onto the top riser.

