


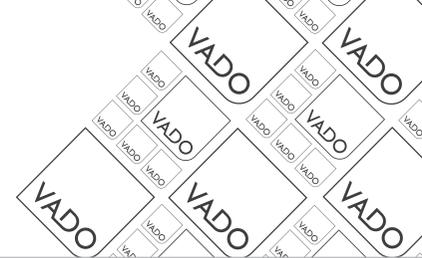

where inspiration flows

SAFARI




Installation Guide
Bath shower mixer with shower kit


This instruction booklet covers these models:

SAF-130+K, SAF-230+K
(All finish options)

SAF-130+K
SAF-230+K

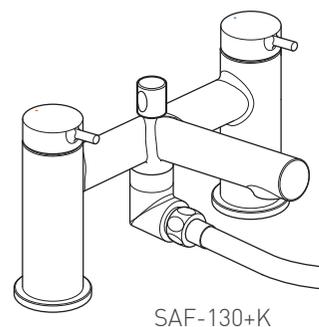

SAF-130+K

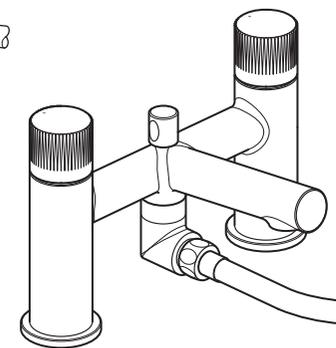

SAF-230+K



Vado
Wedmore Road, Cheddar, Somerset, England BS27 3EB
tel 01934 744466. fax 01934 744345
aftersales@vado.com
www.vado.com



Important - Please Read

Please read these instructions carefully before starting installation and keep for future reference.

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and will invalidate the guarantee.

The installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing Regulations.
To be installed in accordance with BS EN806.

We strongly recommend that you use a qualified and registered plumber.

General Installation

This fitting is a mixing device and therefore water supplies should be reasonably balanced.

When installed, the fitting must comply with the requirements of the Water Supply (Water Fittings) Regulations 1999 and Scottish Byelaws 2004.

For further information, contact the Water Regulations department of your local water supplier (see the WRAS website www.wras.co.uk for details) or the Water Regulations Advisory Scheme by email (info@wras.co.uk) or telephone: 01495848454.

Before making any inlet pipe connections, all supply pipes MUST be thoroughly flushed to remove debris. Failure to do so could result in damage or low flow from the mixer unit. Water Supply (Water Fittings) Regulations 1999 Schedule 2 Section 13.

The fitting of isolating valves to the inlet feeds is advised for ease of maintenance.

Please take great care when installing this mixer not to damage its surface.

Please note if installing in an enclosed environment, access should be left for servicing and maintenance. No costs relating to inadequate access can be accepted.

Please note: installation for the SAF-230+K is shown throughout this guide, please follow the same instructions to install the SAF-130+K.


Operating Specifications

Operating Pressure



Minimum operating pressure **0.2 bar**

Maximum operating pressure **5 bar**



Contents of Packaging

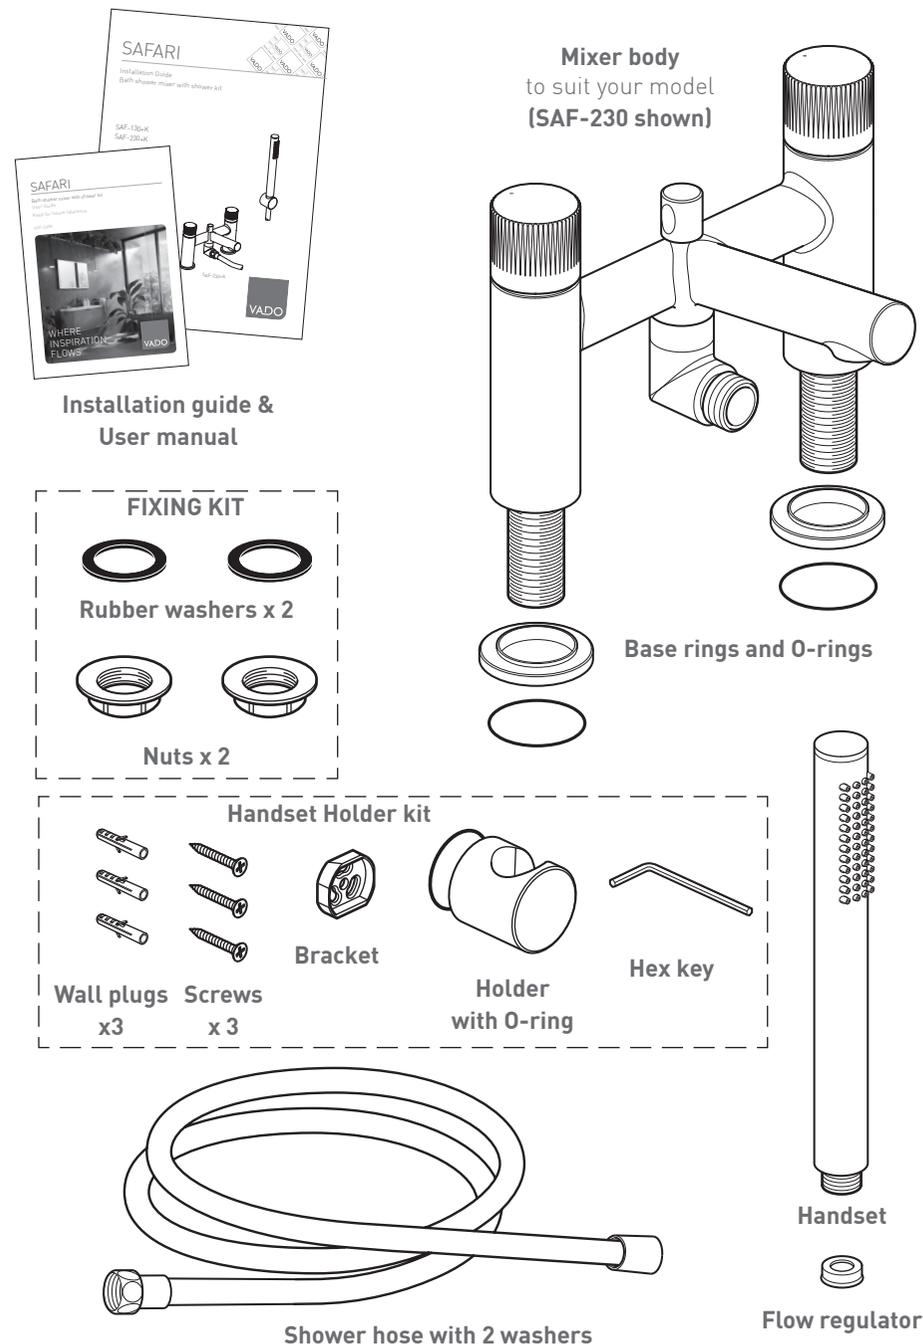




Dimensions - SAF-130+K

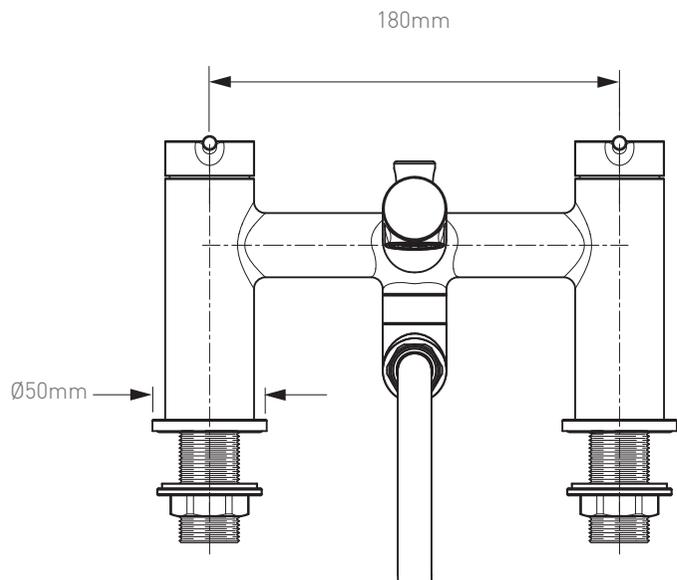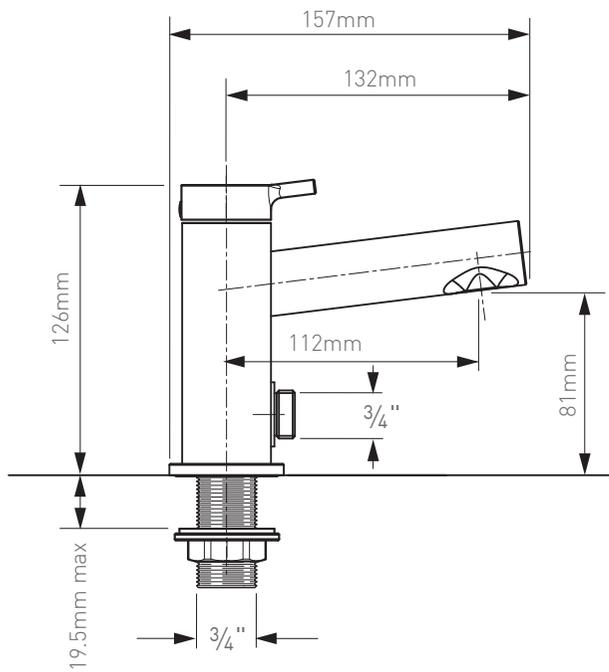






Dimensions - SAF-230+K

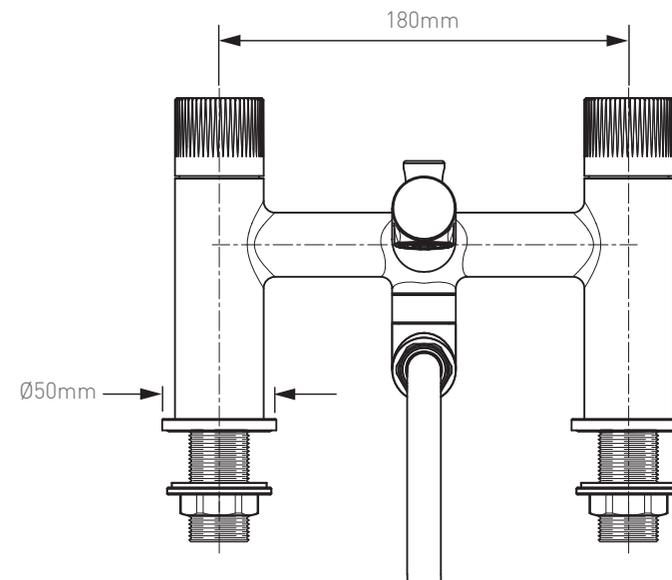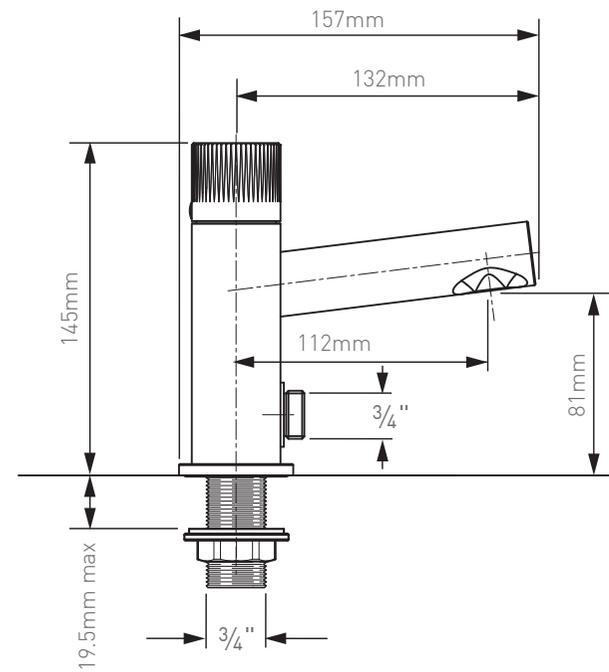


Installation - Quick guide

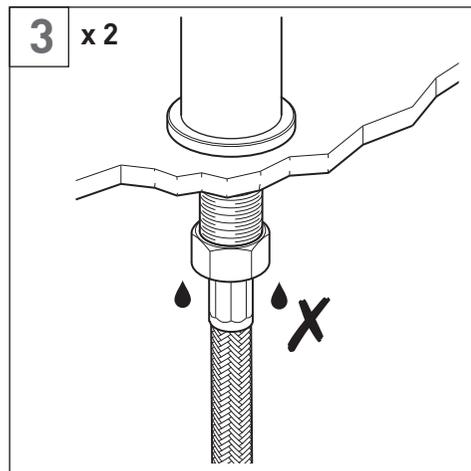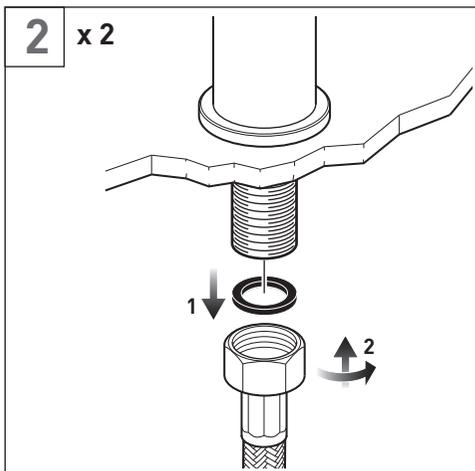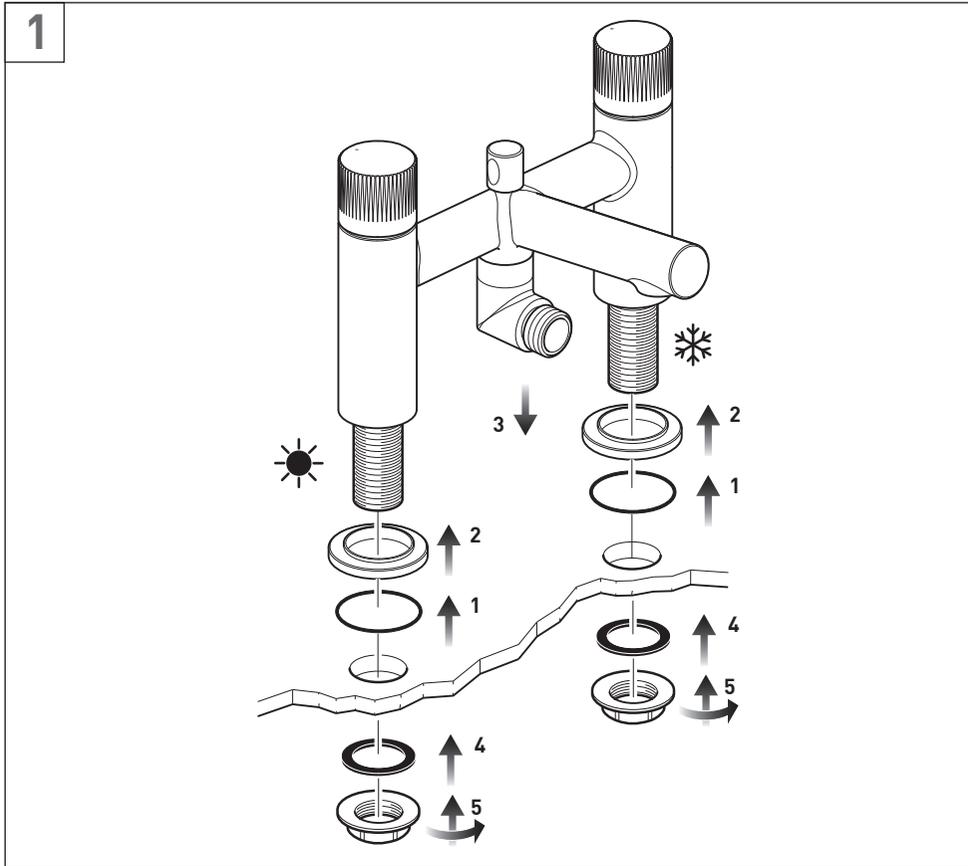

Installation - Quick guide

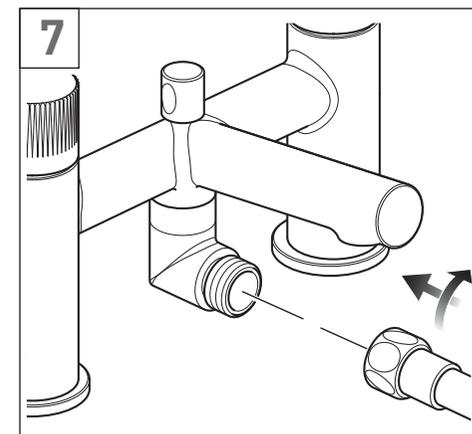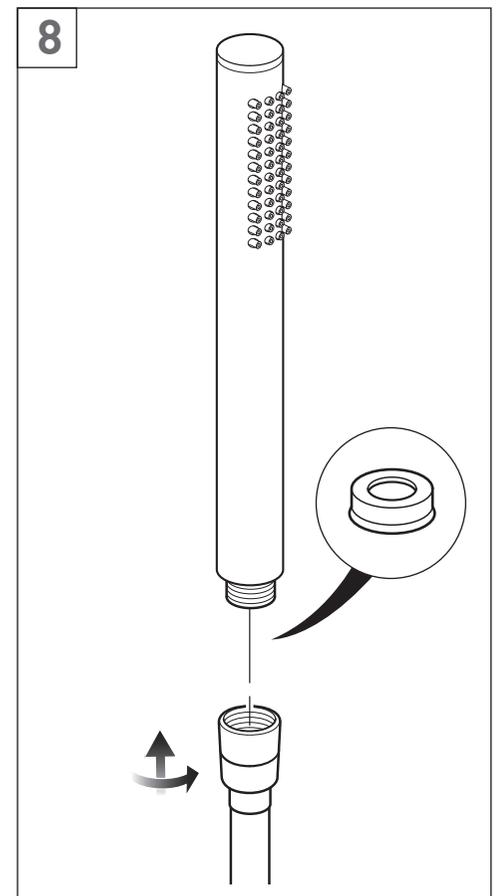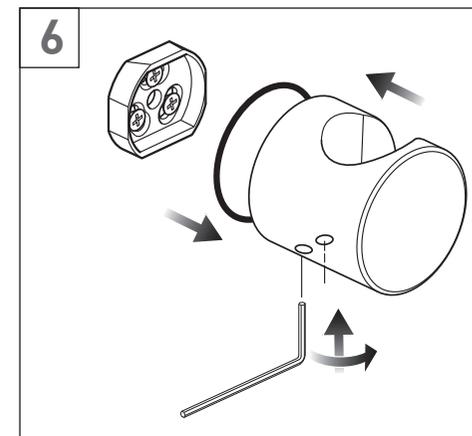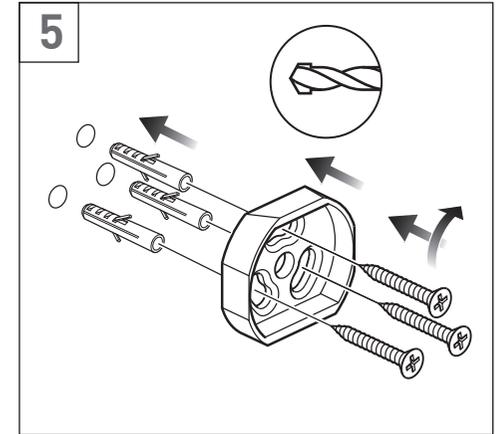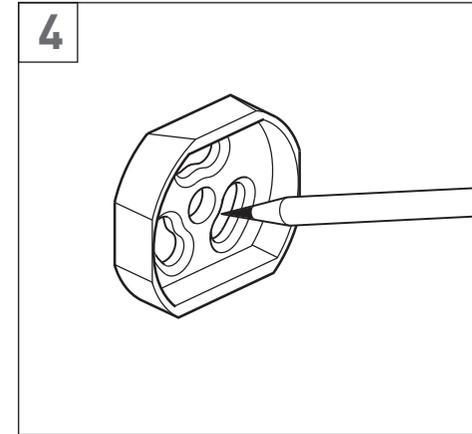

Installation

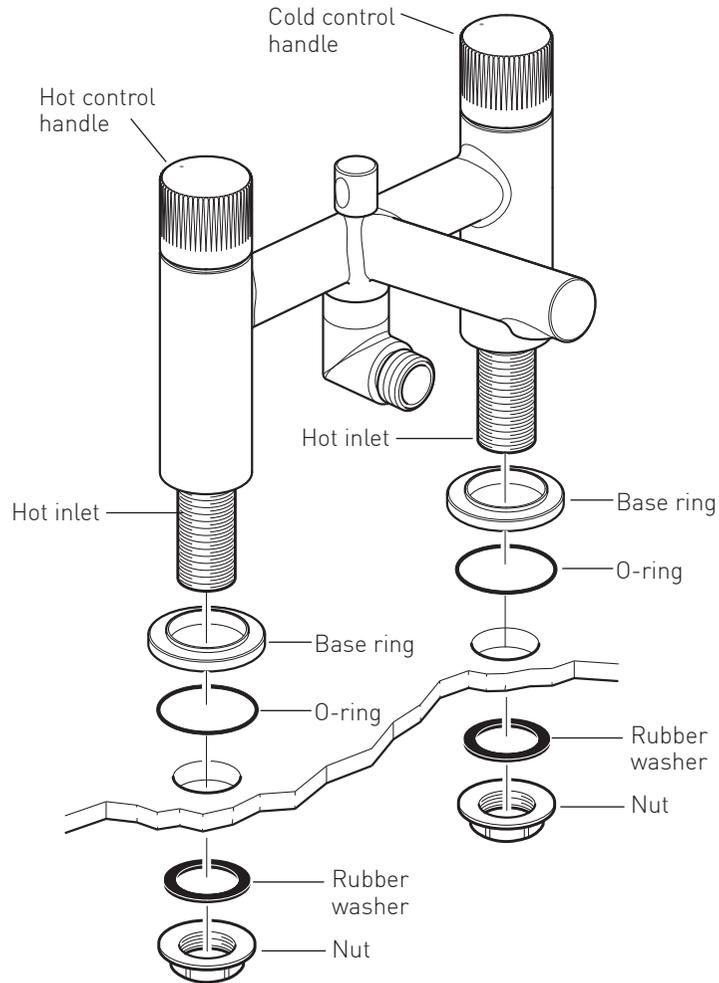

Before installing your new mixer, flush through the pipework to ensure removal of debris, turn off the water supply.

Ensure the O-rings are in the groove of the base rings. Place the base ring onto the underside of the mixer.

Position the mixer on the bath. From the underside of the bath fit the rubber washers and nuts. Tighten the nuts to clamp the mixer to the bath.

CAUTION: Do not over tighten the nuts as this may damage the bath.

Connect the water supply to the inlet pipes. The hot water should be connected to the left hand pipe and cold to the right.

Installation

Handset holder



⚠ Warning! Please check for any hidden pipes and cables before drilling holes in the wall.

If you are fitting the unit to a partition wall or a wall of particularly soft substrate you will need specialist fixings.


Select the position for the shower holder bracket and mark the 3 fixing positions with a suitable pencil.

Remove the holder from the wall

Drill the 3 marked holes to a suitable depth for the wall plugs and secure with supplied screws.

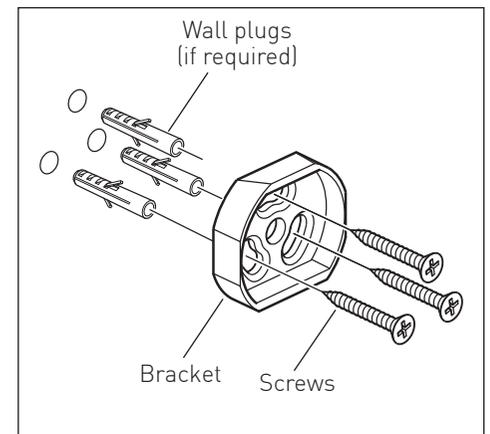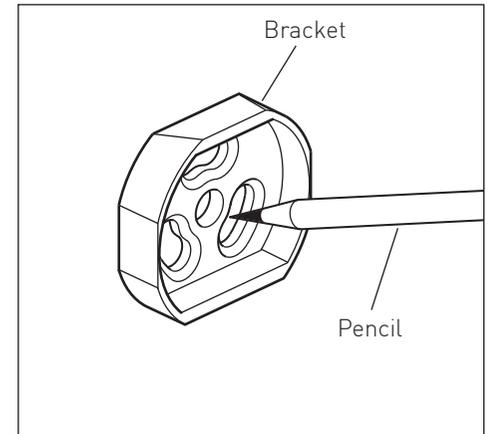

Make sure that the O-ring is in place in the holder. Slide the holder over the bracket and secure in position using the two grub screws on the inderside, tighten using the supplied hex key.

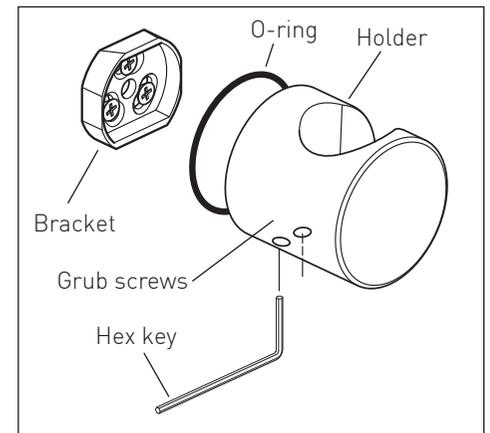


Installation


Handset

Screw the cone end of the hose to the handset.

Place the handset into the holder.

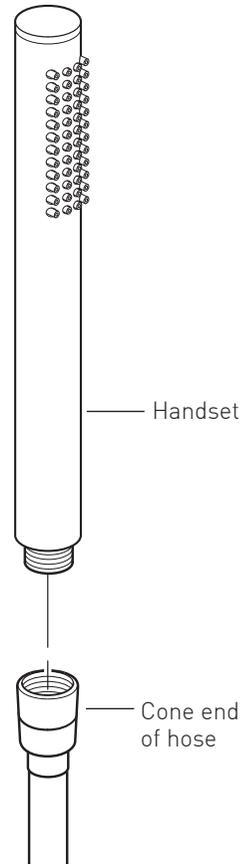

Attach the nut end of the hose to the mixer outlet.

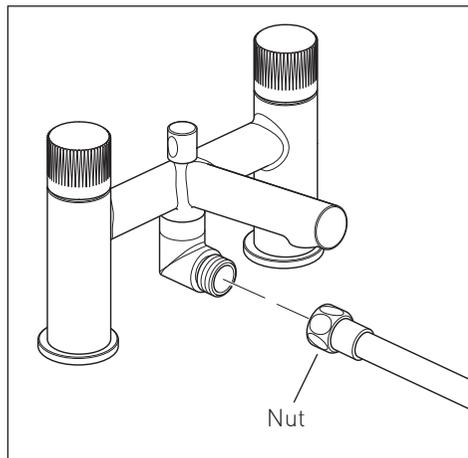

Maintenance

Handset

If required, a flow regulator can be **inserted into the handset** to conserve water.

Insert the flow regulator make sure that the flow regulator is in the orientation shown below.

