### Guarantee

All VADO products come with a 2 year guarantee as standard. Within this guarantee period VADO will provide replacement parts and any labour [SEE NOTE 1] needed to complete the product repair.

This standard guarantee may be extended by registering your product to give up to a 15 year guarantee period. Once registered:

VADO chromed brassware and stainless steel products have a 15 year quarantee (2 years parts and labour plus 13 years parts only).

VADO Sensori SmartTouch and SmartDial products have a 5 year guarantee (parts and labour).

VADO Identity and i-tech products have a 5 year guarantee (2 year parts and labour plus 3 years parts only).

All other VADO products have a 3 year quarantee (2 years parts and labour plus 1 year parts only)

### [SEE NOTE 2].

#### **Guarantee Conditions**

Our products are guaranteed against manufacturing defects from the date of purchase until the expiry of the relevant guarantee period shown above.

The guarantee is only valid if:

- •The product has been installed, used and maintained in accordance with VADO's instructions and subjected to normal use only.
- •The defect is not due to use of an unsuitable or inadequate water or power supply.
- •The defect is not due to accident, misuse, neglect or incorrect/inappropriate repair (other than by VADO or VADO authorised agents) or damage caused by foreign objects or substances.
- •The extended guarantee is only available if you have completed the Guarantee Registration Process.

This can be done via the VADO website or via phone to our aftersales team.

Registration must be completed within 6 months from date of purchase.

Under the extended guarantee period VADO will, at its option, offer to supply any replacement product (or component part) assessed to be defective [SEE NOTE 3].

The quarantee (whether standard or extended) is non-transferable to any subsequent owner. All claims under the guarantee should be notified in the first instance to our Aftersales department, contact details below, this must be done no later than the last day of the relevant quarantee period.

All claims must be accompanied by proof of purchase (sales receipt or delivery note) from an official VADO dealer.

The guarantee does not extend to any consequential loss or damage.

After repair or replacement, the relevant guarantee period will be calculated from the original date of purchase.

VADO operates a policy of continuous product development and therefore reserves the right to change the product, packaging and documentation specifications without notice, E&OE,

#### NOTES:

[1] Labour via our engineer network is only available in the UK. Attendance by a VADO engineer or sub-contract engineer will be under our standard terms and conditions.

[2] VADO spare parts and shower hoses are under a parts only guarantee.

[3] VADO reserves the right to charge in advance for a product (or replacement part) pending collection and investigation (at VADO expense) to confirm a defect is due to a manufacturing issue.

If a defect is found the charge will be refunded or cancelled.

This guarantee is in addition to and does not affect your statutory rights as a consumer. Tel: 01934 745163

Email: aftersales@vado.com

## ARRONDI™

Floor standing bath shower mixer





Keep for future reference







### Welcome

### Thank you for choosing VADO

Our products can be found in some of the most prestigious hotel, commercial and residential developments across the world, therefore you can expect exceptional product quality and outstanding customer service.

This product has passed through stringent quality assurance processes coupled with demanding lifecycle mechanical testing to ensure it reaches the exacting standards that allow us to offer our premium 15 year guarantee.

We work to ensure our product designs are harmonious with all sanitaryware, so when you choose VADO, your choice of coordinating items is unlimited.


### With VADO, you can really let your inspiration flow.

For any technical or operational queries please contact our experienced aftersales team on 01934 745163.

## Cleaning instructions:

The electroplating on this product is finished to the highest standard. Due care needs to be taken to ensure the appearance is retained. We recommend cleaning all products with a soft damp cloth ONLY and advise strongly against the use of all aggressive/corrosive cleaning products i.e. powders and liquids. If these instructions are not followed, this may invalidate your quarantee in the event of a problem occurring.


The aerator can be cleaned using vinegar or diluted essence of vinegar or vinegar based household cleaners. Stubborn scale can be removed mechanically, e.g. with an old toothbrush. We do not recommend bleach based chemical household cleaners.

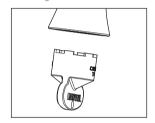


Should the aerator need to be removed, please use the provided aerator key.

VADO, Wedmore Road, Cheddar, Somerset, England BS27 3EB tel 01934 744466 fax 01934 744345 aftersales@vado.com

# Operation

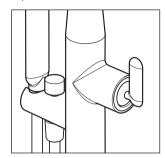


Handle in the Off position.

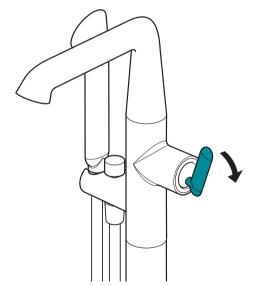

Pulling the mixer lever outwards will increase the flow of cold water.

# Operation

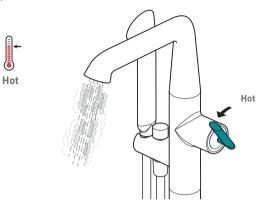


Pulling the mixer lever forwards will increase the flow of hot water.




Pushing the mixer lever backwards will increase the flow of cold water.

## Operation

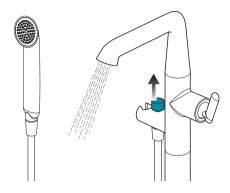

Pull up the diverter handle to change flow to handset.

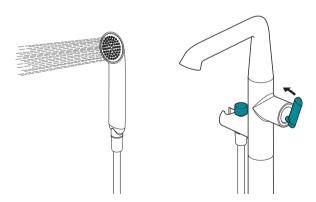

Handset will automatically shut off when the flow handle is turned off.

## Maintenance

### Cartridge


Subject to local water conditions, the cartridge should be cleaned from time to time. Before carrying out any maintenance, shut off the water supply to the tap. Firstly, return the handle to the central position. Using a 2mm allen key, enter the slot on the underneath of the handle aiming directly upwards. Locate and loosen the grub screw (but do not remove). Lift up the handle and handle shroud. Carefully use a 28mm box spanner unscrew the retaining nut and remove the cartridge. Wash the cartridge with running water and make sure that any debris has been removed. Dry and lightly grease the seals (only use silicone grease), return the cartridge, retaining nut, shroud, and handle.

7

# Parts list:

| Item | Part            | Code                             | Qty |
|------|-----------------|----------------------------------|-----|
| 1    | Handle          | ARR-4-CP                         | 1   |
| 2    | Shroud          | ARR-133HDLSHR-CP                 | 1   |
| 3    | Cartridge       | C-002-N35                        | 1   |
| 4    | Diverter        |                                  | 1   |
| 5    | Spout           | ARR-SPOUT3-CP                    | 1   |
| 6    | Flow Straighter | N-113-24-0-PLA                   | 1   |
| 7    | Flow Remover    | N-006-24-0-PLA                   | 1   |
| 8    | Handset         | ARR-HANDSET-CP                   | 1   |
| 9    | Hose            | ARR-HOSE/AT-SIL                  | 1   |
| 10   | Base Connection | CON-033-BR                       | 1   |
| 11   | Base Fixings    | CON-033-FIXINGS                  | 1   |
| 12   | Base Shroud     | ARR-133BASESHR-CP                | 1   |
| 13   | Manuals         | INSTALLATION GUIDE & USER MANUAL | 1   |

# Parts:

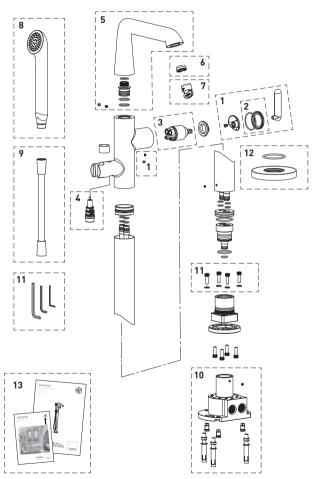

9

Notes:

Notes: