




where inspiration flows

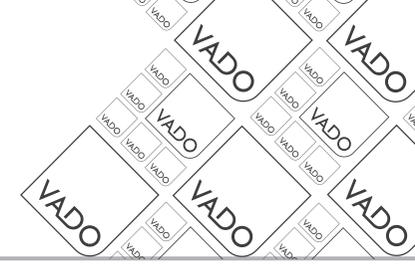


## Installation Guide

Thermostatic shower valve with adjustable rigid riser

This instruction booklet covers model:

VEL-149RRK-RO-CP  
AQB-149RRK-RO-CP  
ATM-149RRK-RO-CP

VEL-149RRK-RO-CP  
AQB-149RRK-RO-CP  
ATM-149RRK-RO-CP

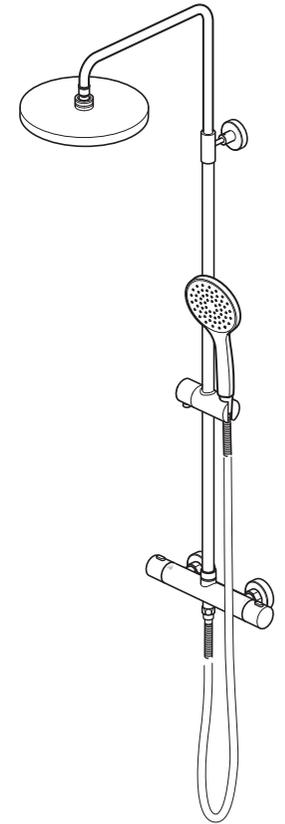

Note: for illustrative purposes only the VEL model is shown.  
Please follow the same procedure to install the AQB & ATM.



Keep for future reference

Vado  
Wedmore Road, Cheddar, Somerset, England BS27 3EB  
tel 01934 744466. fax 01934 744345  
aftersales@vado.com  
www.vado.com

## Contents

Important information.....	3
General installation.....	3
Operating Specifications .....	3
Contents of packaging .....	4
Dimensions.....	6
Installation - Quick guide.....	7
Installation - Off-set connectors .....	12
Installation - Quick -fit connectors.....	13
Installation - Shower hose.....	17
Commissioning.....	18

## Notes

## Commissioning

The valve has been factory set under balance pressures and hot water supply at 65°C. When your specific operating conditions are significantly different from the above, the temperature of the water may vary from the setting.

When the difference is too great, you can adjust the calibration of the valve to suit individual requirements of the installation:

1. Check the temperature of the water being delivered from the outlet with a thermometer.

**Note:** temperature readings should be taken at normal flow rate after allowing for the system to stabilise.

2. If the temperature is not 38°C proceed to reset the calibration as follows.

Remove the handle.

Ensure the step on the stop ring is located at 12 o'clock.


Do not remove the plastic stop ring. Turn the spline of the thermostatic valve clockwise to decrease the temperature and anti-clockwise to increase the temperature until 38°C is achieved at outlet.

**Note:** the sensing part of the thermometer probe must be fully submerged in the water that is to be tested.

Replace the handle making sure that the pin is against the step.

Once the handle has been attached ensure the temperature does not exceed 46°C when turned entirely anti-clockwise.

Your valve setting is now commissioned.

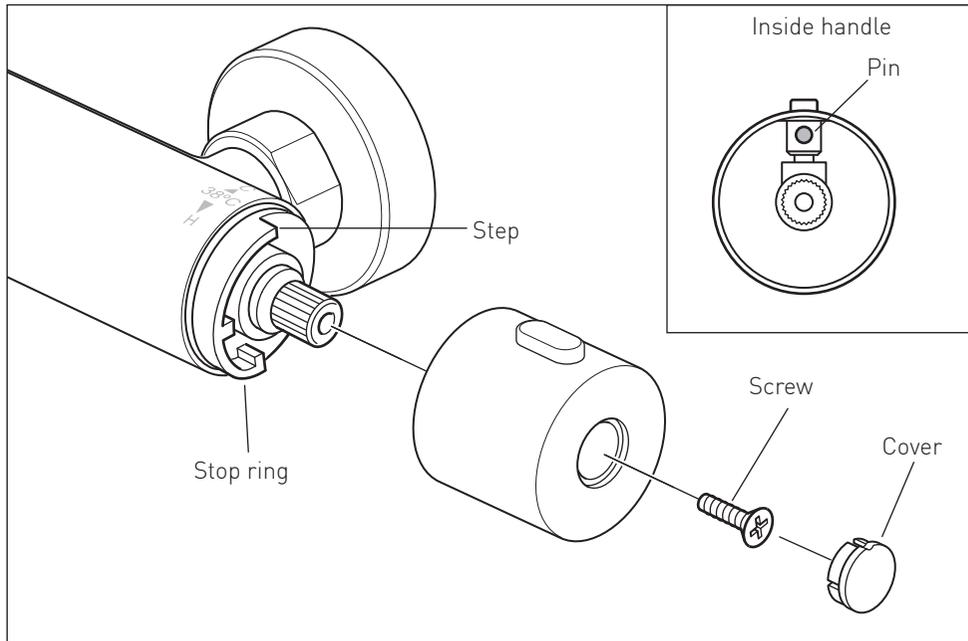

## Important - please read

Please read these instructions carefully before starting installation and keep for future reference.

Remove all packaging and check the product for missing parts or damage before starting installation.

Any alterations made to this product and fittings may infringe water regulations and will invalidate the guarantee.

The installation must comply with all Local/National Water Supply Authority Regulations/Byelaws and Building and Plumbing Regulations.

To be installed in accordance with BS EN806.

We strongly recommend that you use a qualified and registered plumber.

## General installation

This fitting is a mixing device and therefore water supplies should be reasonably balanced.

When installed, the fitting must comply with the requirements of the Water Supply (Water Fittings) Regulations 1999 and Scottish Byelaws 2004.

For further information, contact the Water Regulations department of your local water supplier (see the WRAS website [www.wras.co.uk](http://www.wras.co.uk) for details) or the Water Regulations Advisory Scheme by email ([info@wras.co.uk](mailto:info@wras.co.uk)) or telephone: 01495848454.

Before making any inlet pipe connections, all supply pipes MUST be thoroughly flushed to remove debris. Failure to do so could result in damage or low flow from the mixer unit. Water Supply (Water Fittings) Regulations 1999 Schedule 2 Section 13.

The fitting of isolating valves to the inlet feeds is advised for ease of maintenance.

Please take great care when installing this mixer not to damage its surface.

Please note if installing in an enclosed environment, access should be left for servicing and maintenance. No costs relating to inadequate access can be accepted.


## Operating Specifications

### Operating Pressure


**Minimum operating pressure** 1 bar

**Maximum operating pressure** 5 bar


# Contents of Packaging

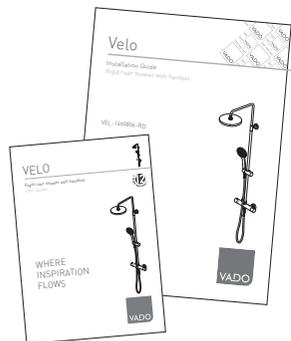

Installation guide & User manual

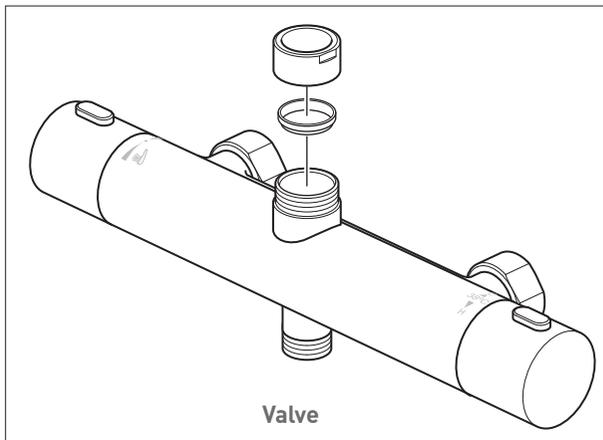


Valve

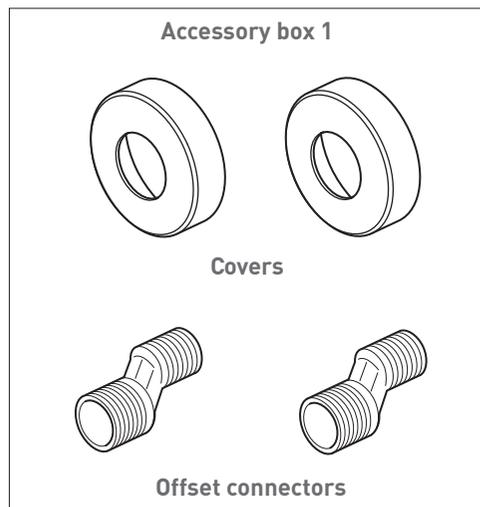

Accessory box 1

Covers

Offset connectors

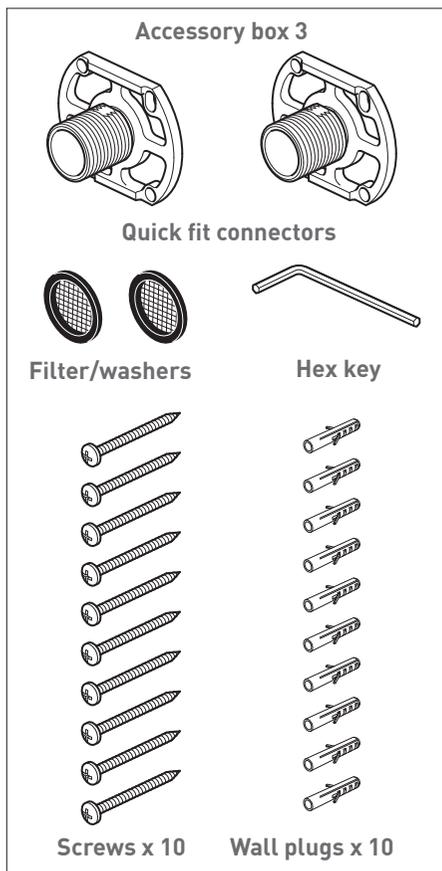

Accessory box 3


Quick fit connectors

Filter/washers

Hex key

Screws x 10

Wall plugs x 10

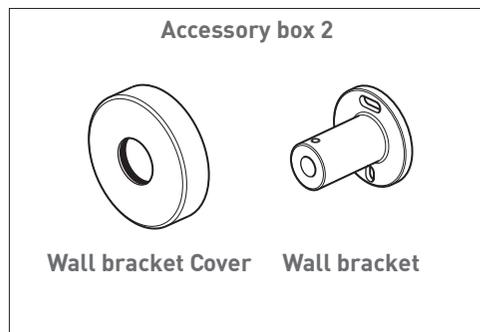


Accessory box 2

Wall bracket Cover Wall bracket

# Installation - Shower hose

## Shower head


Make sure there is a rubber washer in place in the shower head and screw onto the riser arm.

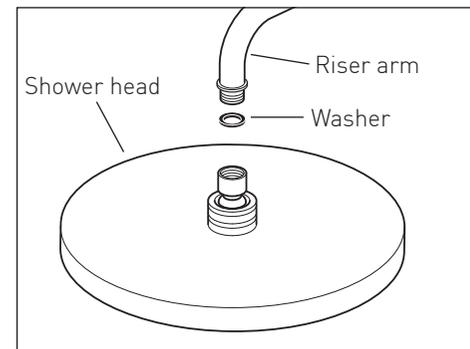

Shower head Riser arm Washer

## Handset


Place one of the rubber washer into the cone end of the hose and screw to the handset.

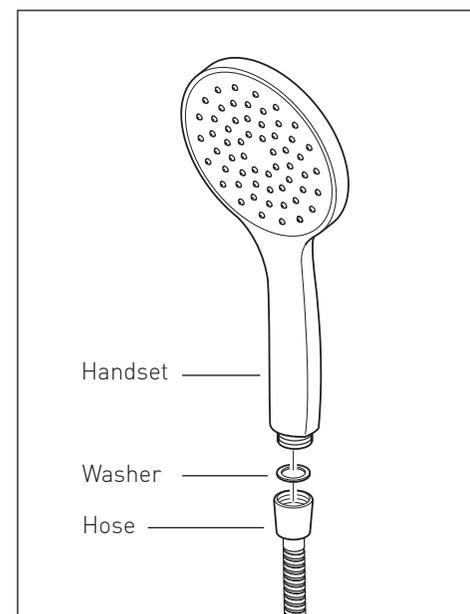

Handset Washer Hose

## Valve

Place the second rubber washer into the nut end of the hose and attach it to the valve outlet.

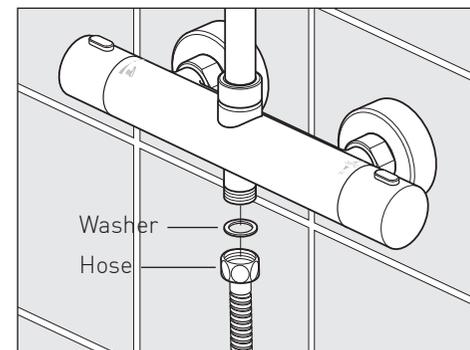

Washer Hose

## Installation - Riser rail

Place the bracket against the wall. Make sure that the riser is vertical, mark the two fixing holes in the wall bracket with a pencil.





**Warning!** Please check for any hidden cables and pipes before drilling holes in the wall.

Remove the riser from the wall and the valve. Drill the marked holes to a suitable depth for the wall plugs and secure with supplied screws.


Slide on the cover.

Push the riser onto the connection on the top of the valve, slide down the seal and tighten the nut.

Using a level secure the wall bracket in position. Tighten the grub screw on the top of the wall bracket.

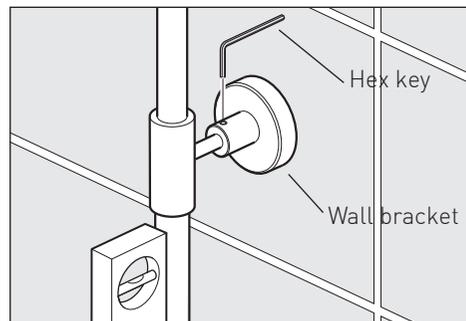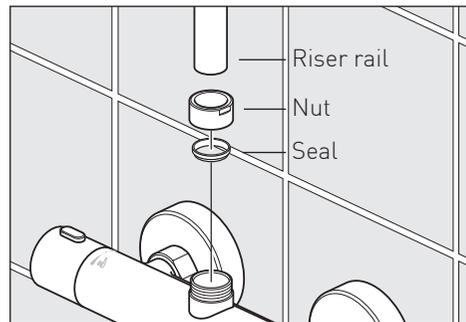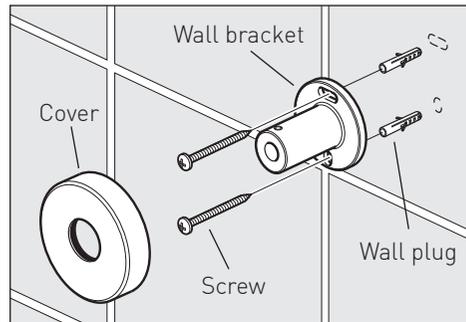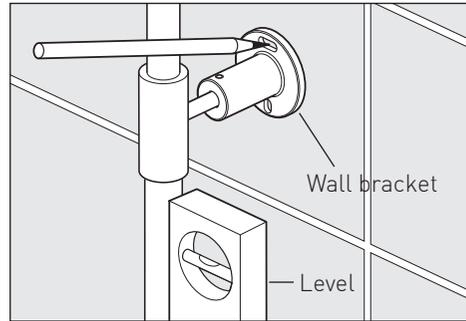


## Contents of Packaging

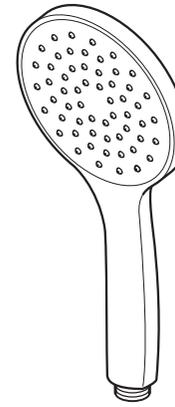


**Handset**

Handset may vary according to model

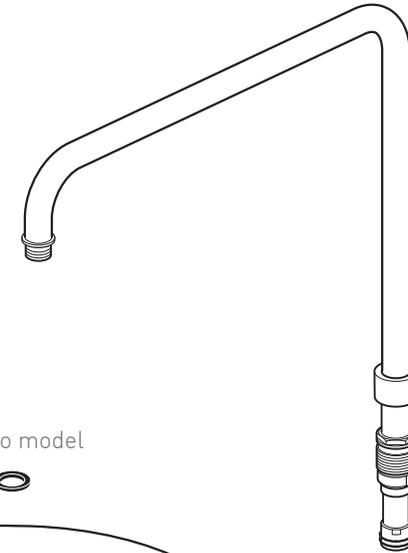


**Riser arm**

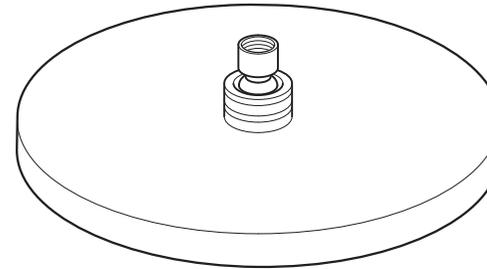


**Shower head** (with a rubber washer)

Shower head may vary according to model

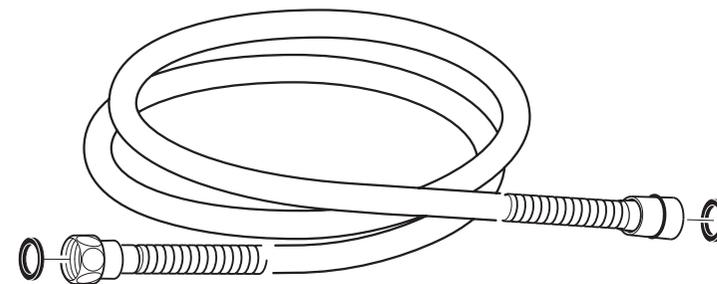


**Shower hose**  
with 2 washers

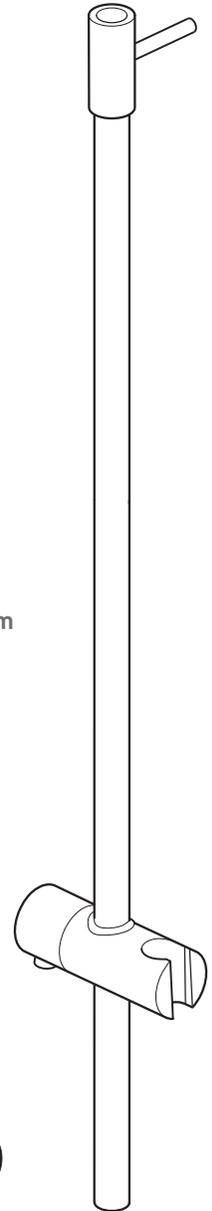

**Riser**

## Dimensions

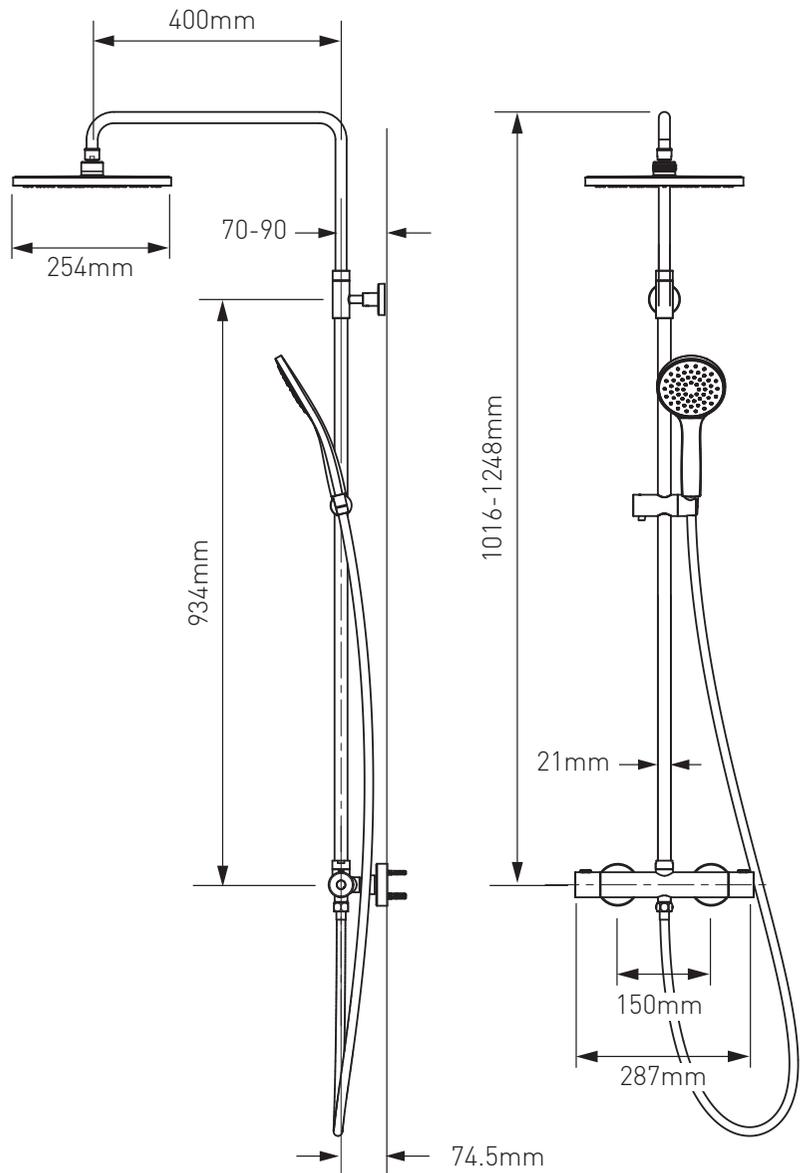


## Installation - Riser rail


You can adjust the height of the riser to suit your requirements.

Carefully push the riser arm into the riser until you reach the required position. Slide the securing nut down and into the riser, tighten the nut.


Pull the cover down over the nut.

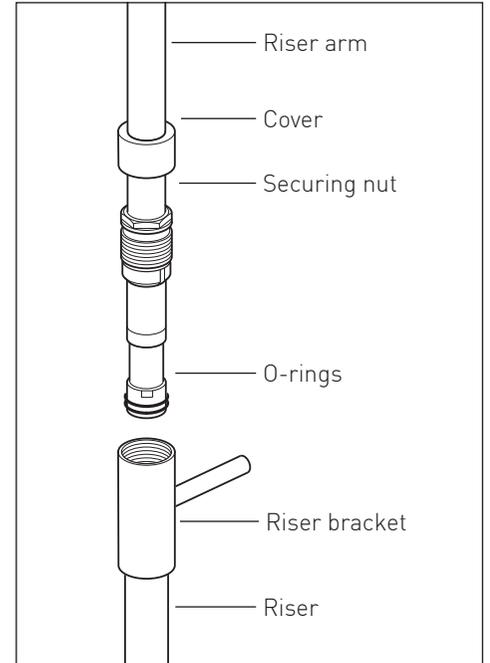

Remove the nut and seal from the top of the valve and slide onto the riser rail. Push the riser onto the connection on the top of the valve, slide down the seal and tighten the nut.

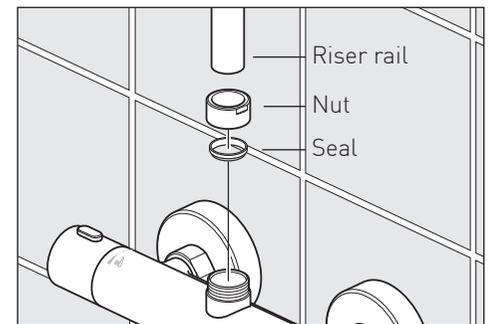



Slide the wall bracket onto the riser bracket.

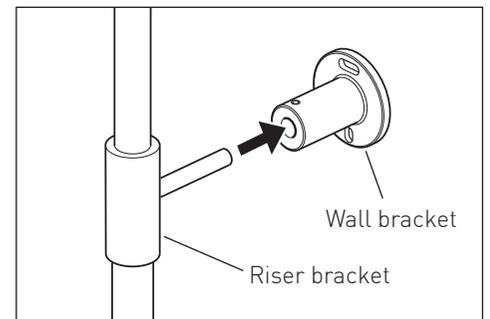

## Installation - Quick fit connectors




Slide on the olive, screw on and tighten the nut.

Before installation flush through the pipe work to ensure removal of debris, turn off the water supply.

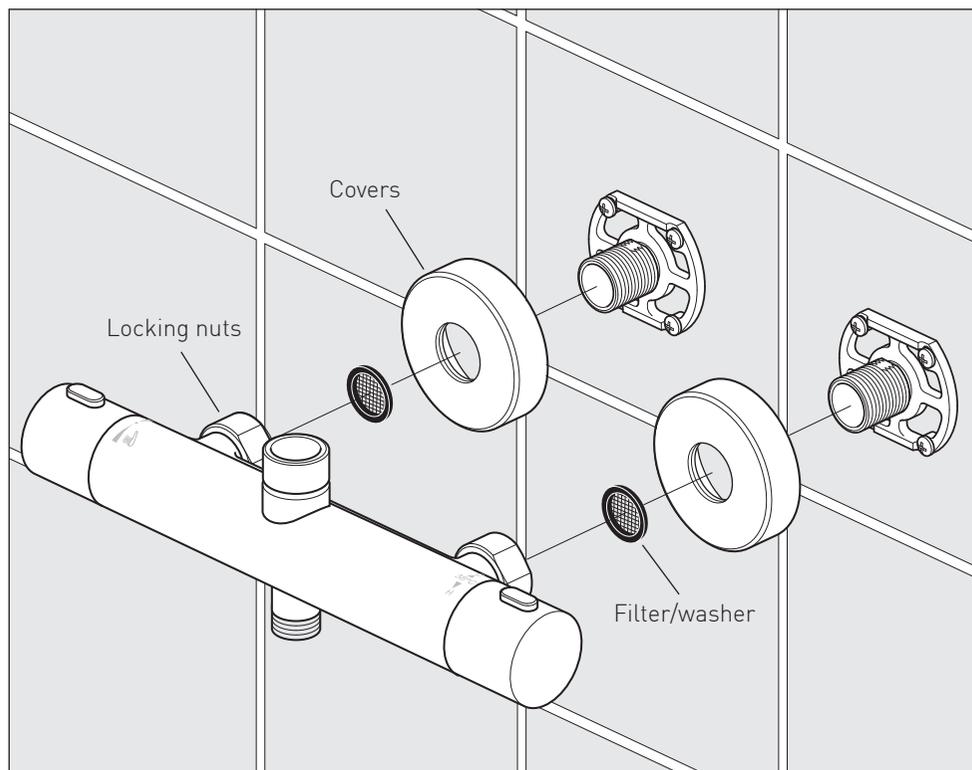
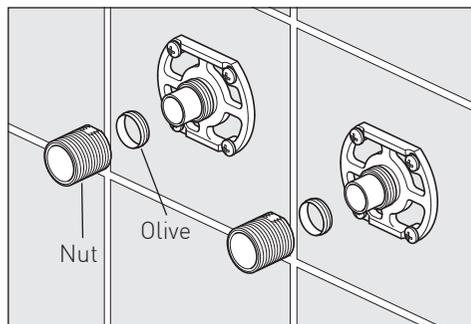


Screw the covers on each offset connector. Place a rubber filter/washer in each of the locking nuts on the valve and screw onto the connectors.

## Installation - Quick guide

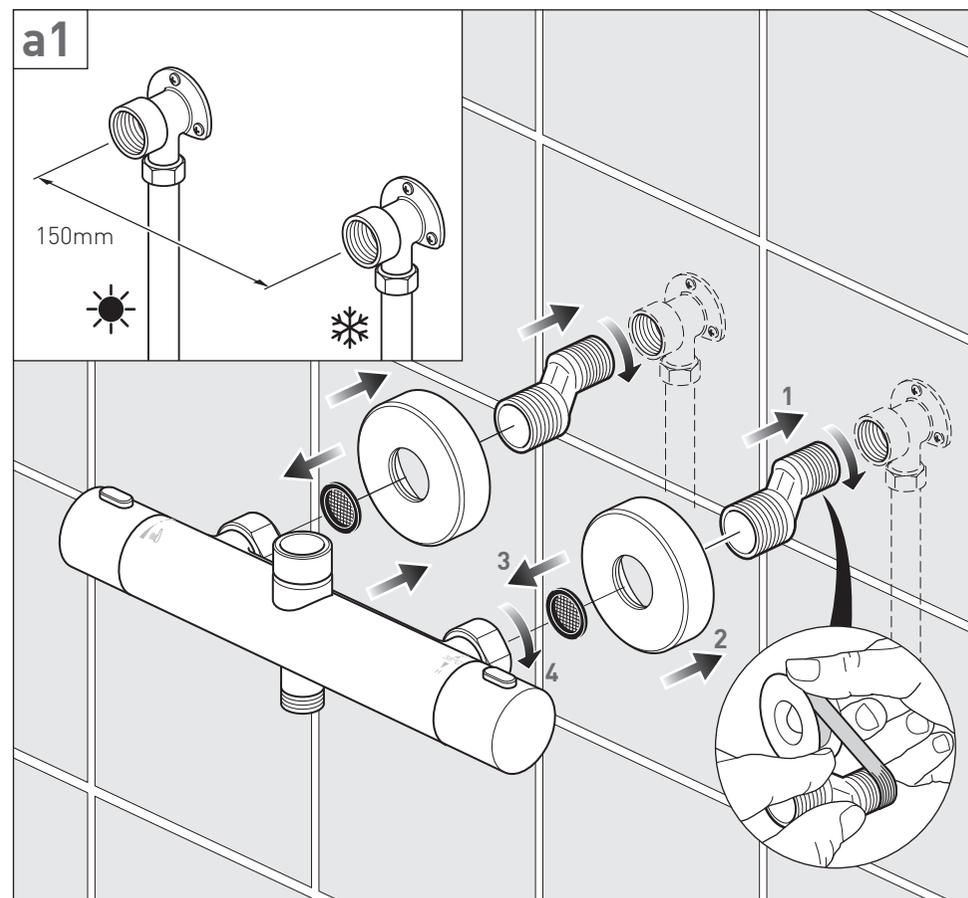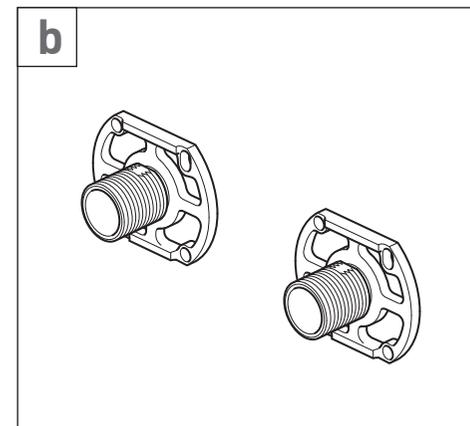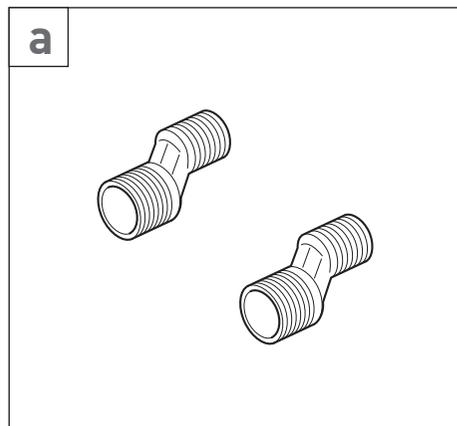

## Installation - Quick guide

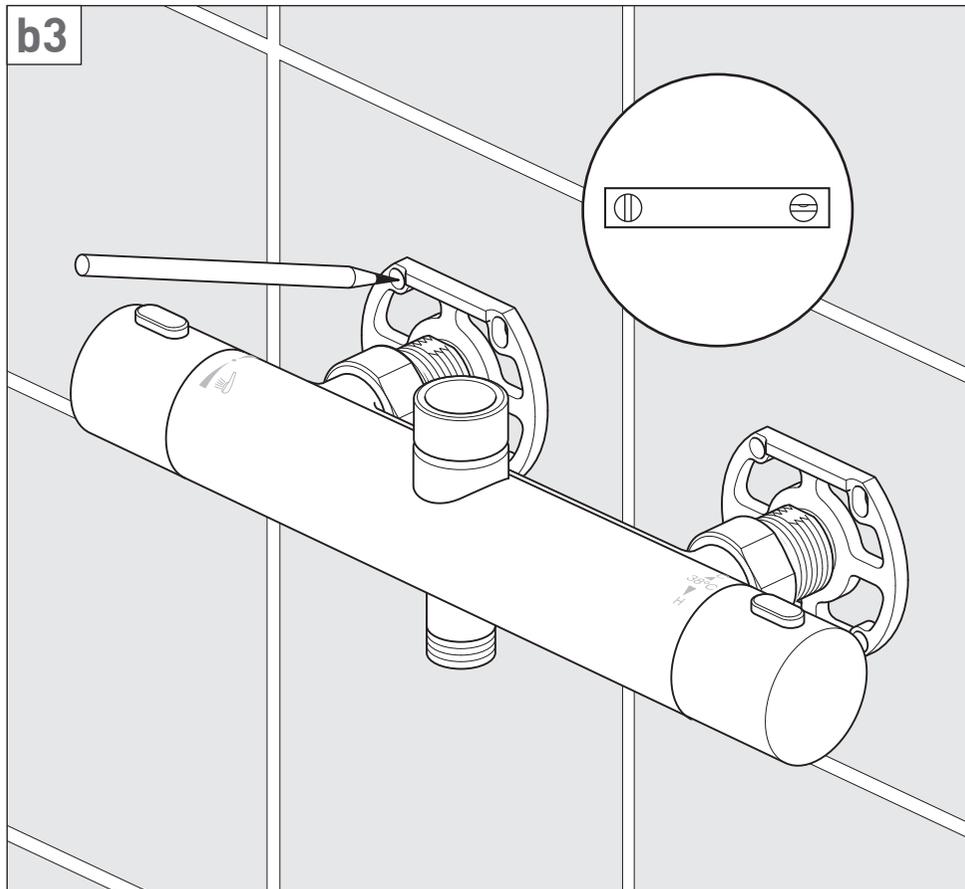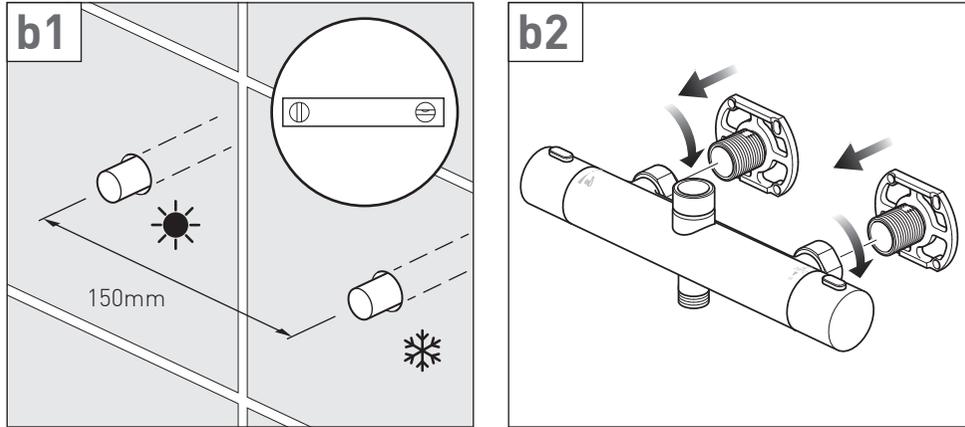





## Installation - Quick fit connectors

**Note:** Make sure that the valve is positioned to allow room for the riser rail to be fitted later (see dimensions on page 6).  
Prepare the wall with 2 copper pipes at 150mm centres. Connect the water supply to the inlet pipes. The hot water should be connected to the left hand pipe.

Temporarily screw both quick fit connectors onto the valve.


Position the valve making sure it is level and mark the position of the 4 screw holes in each connector.

**Warning!** Please check for any hidden cables and pipes before drilling holes in the wall.  
Remove the nut and olive from the connector.  
Drill the 4 marked holes to a suitable depth for the wall plugs and secure with supplied screws. Repeat for the other connector.

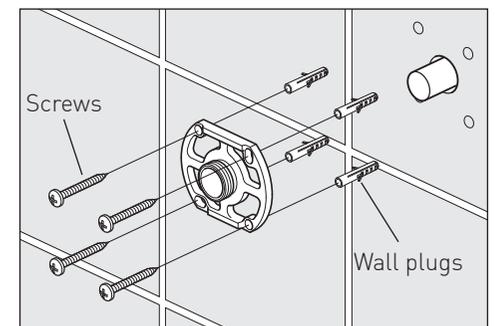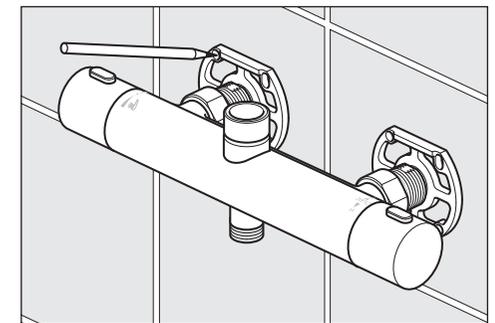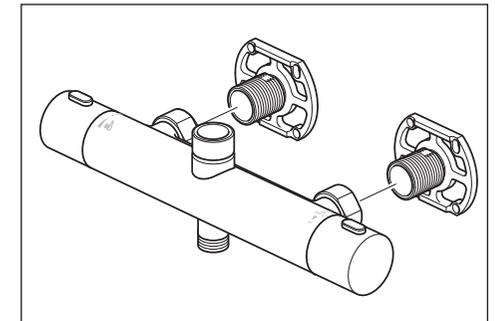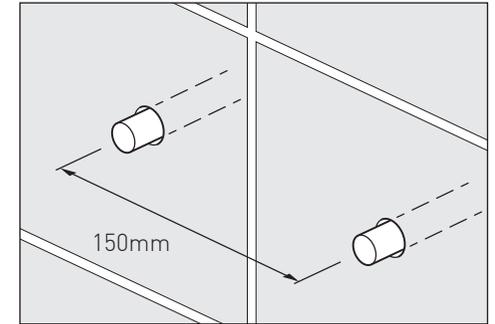

## Installation - Offset connectors

**Note:** There are two options for installing your valve, using offset connectors (below) or quick fit connectors (see page 13).

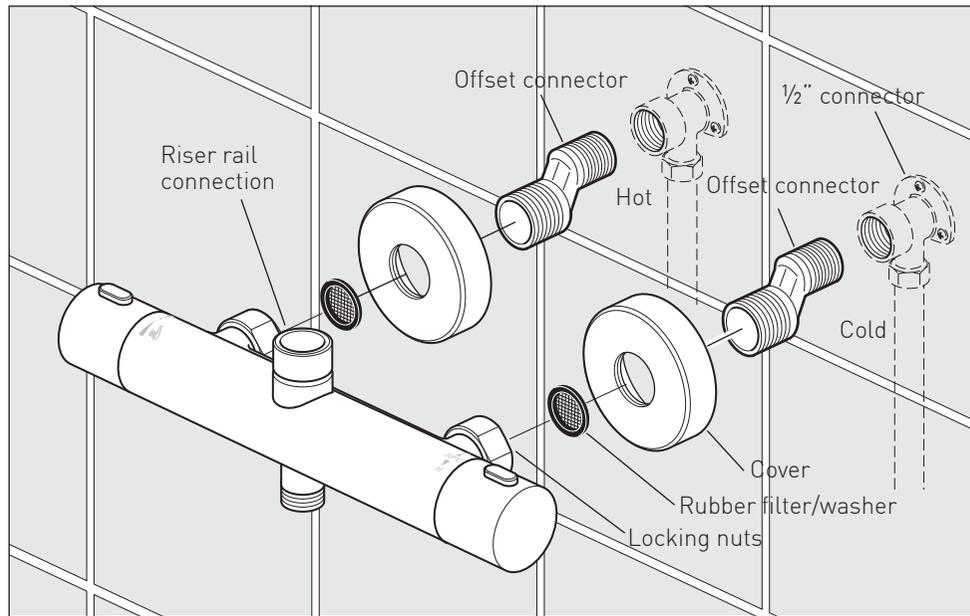

Before installing your new mixer, flush through the pipe work to ensure removal of debris, turn off the water supply.

**Note:** Make sure that the valve is positioned to allow room for the riser rail to be fitted later (see dimensions on page 6).



Prepare the wall with 2 flush 1/2" connectors at 150mm centres. Connect the water supply to the inlet pipes. The hot water should be connected to the left hand pipe.

Using PTFE tape screw on the 2 offset connectors followed by the covers.






Place a rubber filter/washer in each of the locking nuts on the valve and screw onto the connectors, some adjustment can be made to the offset connectors to align the centres and level up the valve.

**Note:** The valve must be connected to rigid pipe work for support.

## Installation - Quick guide

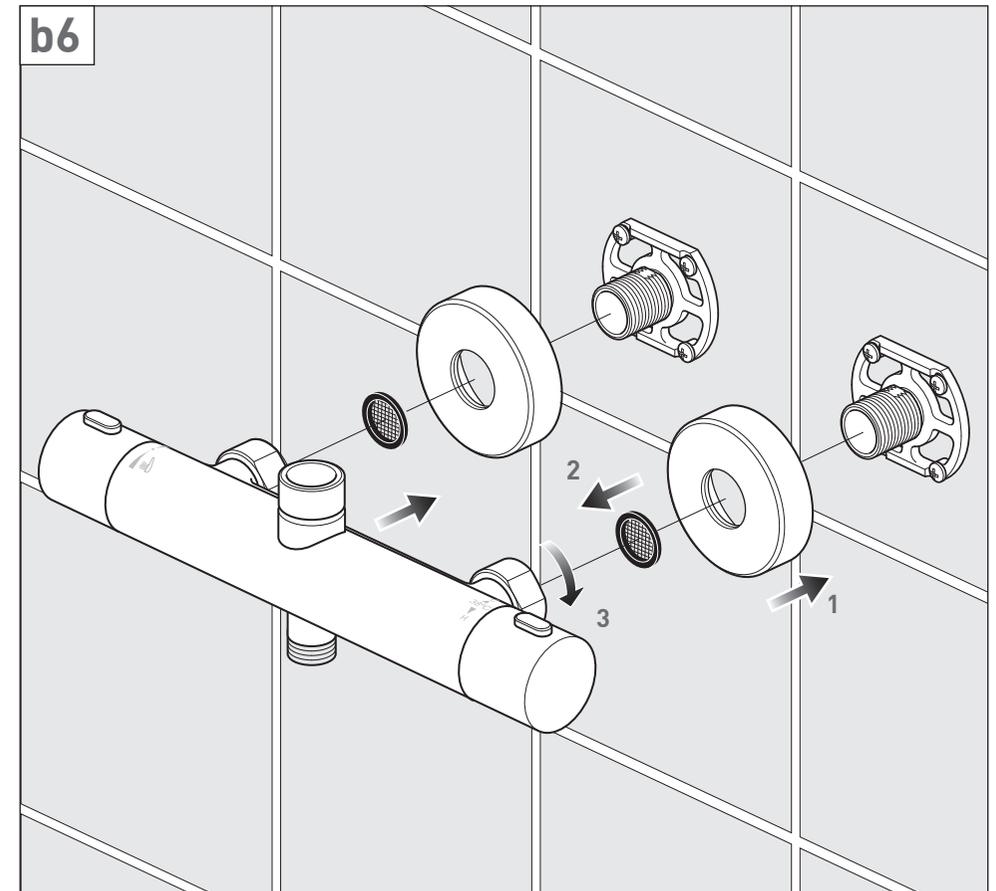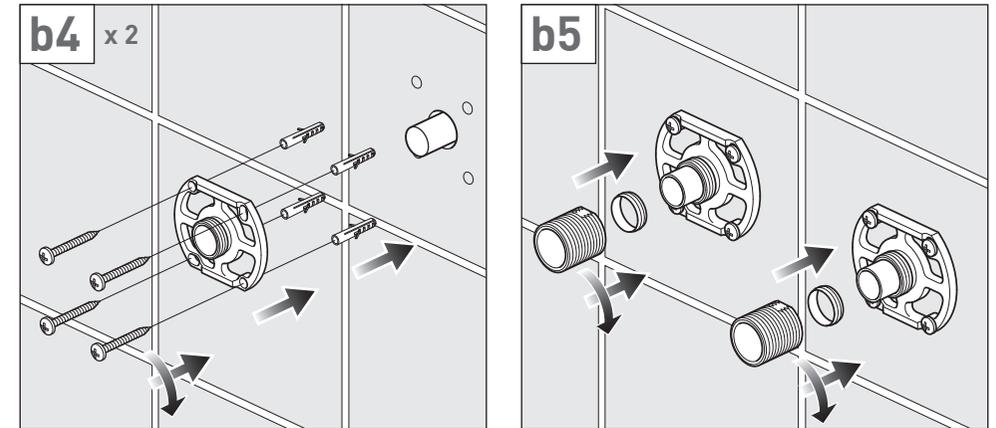

# Installation - Quick guide

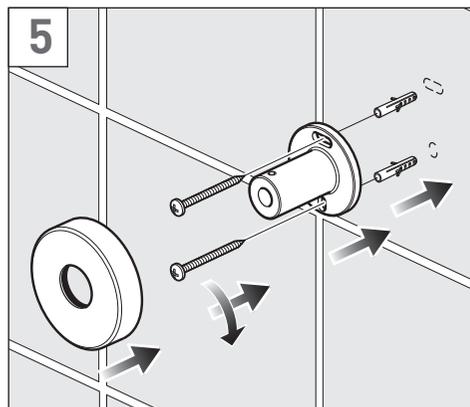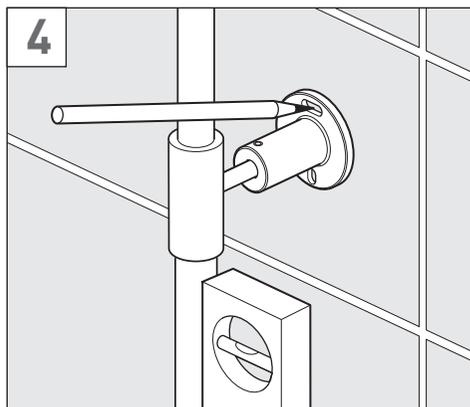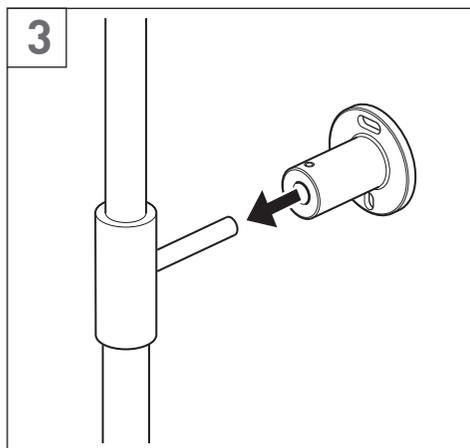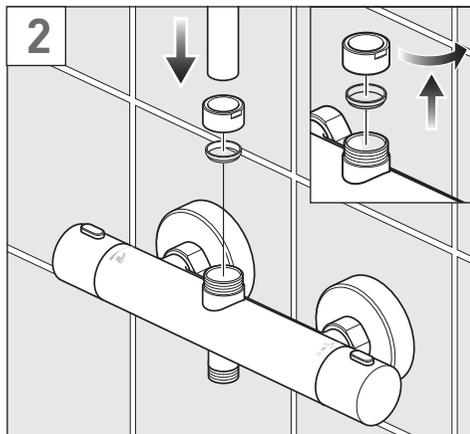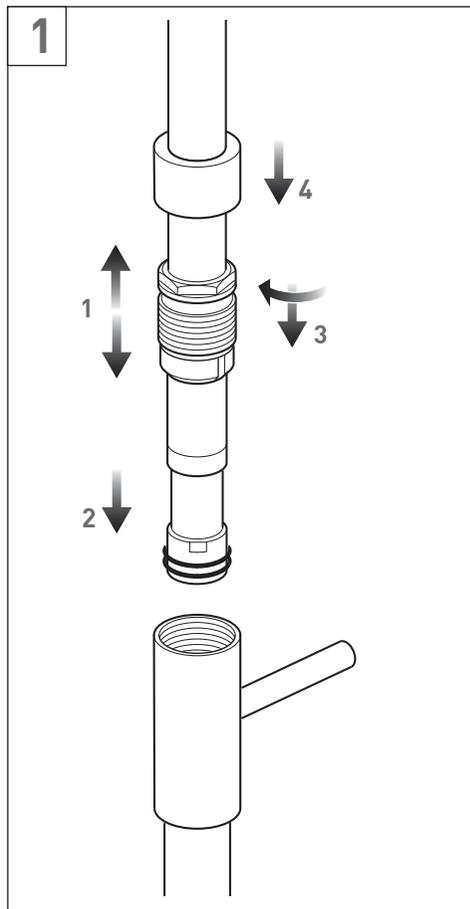

# Installation - Quick guide

